



Assembly Instructions

ECOLIFE
MODEL : CH 8019-HASTING SERIES CHEST


Part List	QTY	Hardware	QTY
1 Top Panel	1	A Allen Key M4	1
2 Left Side Panel	1	B Dowel	40
3 Right Side Panel	1	C Mini Fix Bolt	39
4 Top Support Panel	1	D Mini Fix Housing	39
5 Front Support Panel	1	E Mini Fix Cap	39
6 Back Support Panel	1	F H Profile	2
7 Bottom Panel	1	G CSK Screw M3.5x16mm	60
8 Back Panel	2	H CSK Screw M4x50mm	16
9 Drawer Front Panel	4	I Drawer Slider	4
10 Drawer Side Panel (L)	4	J CSK Screw M4x18mm (Black)	4
11 Drawer Side Panel (R)	4	K L Bracket	4
12 Drawer Back Panel	4	L Stud	4
13 Drawer Bottom Panel	4	M Handle Screw	16
14 Drawer Support Bar	4	N JCBC W M6 x 40mm	4
15 Front Legs	2	O Handle	8
16 Side Legs	2	P White Nail	4
17 Center Back Panel	1		

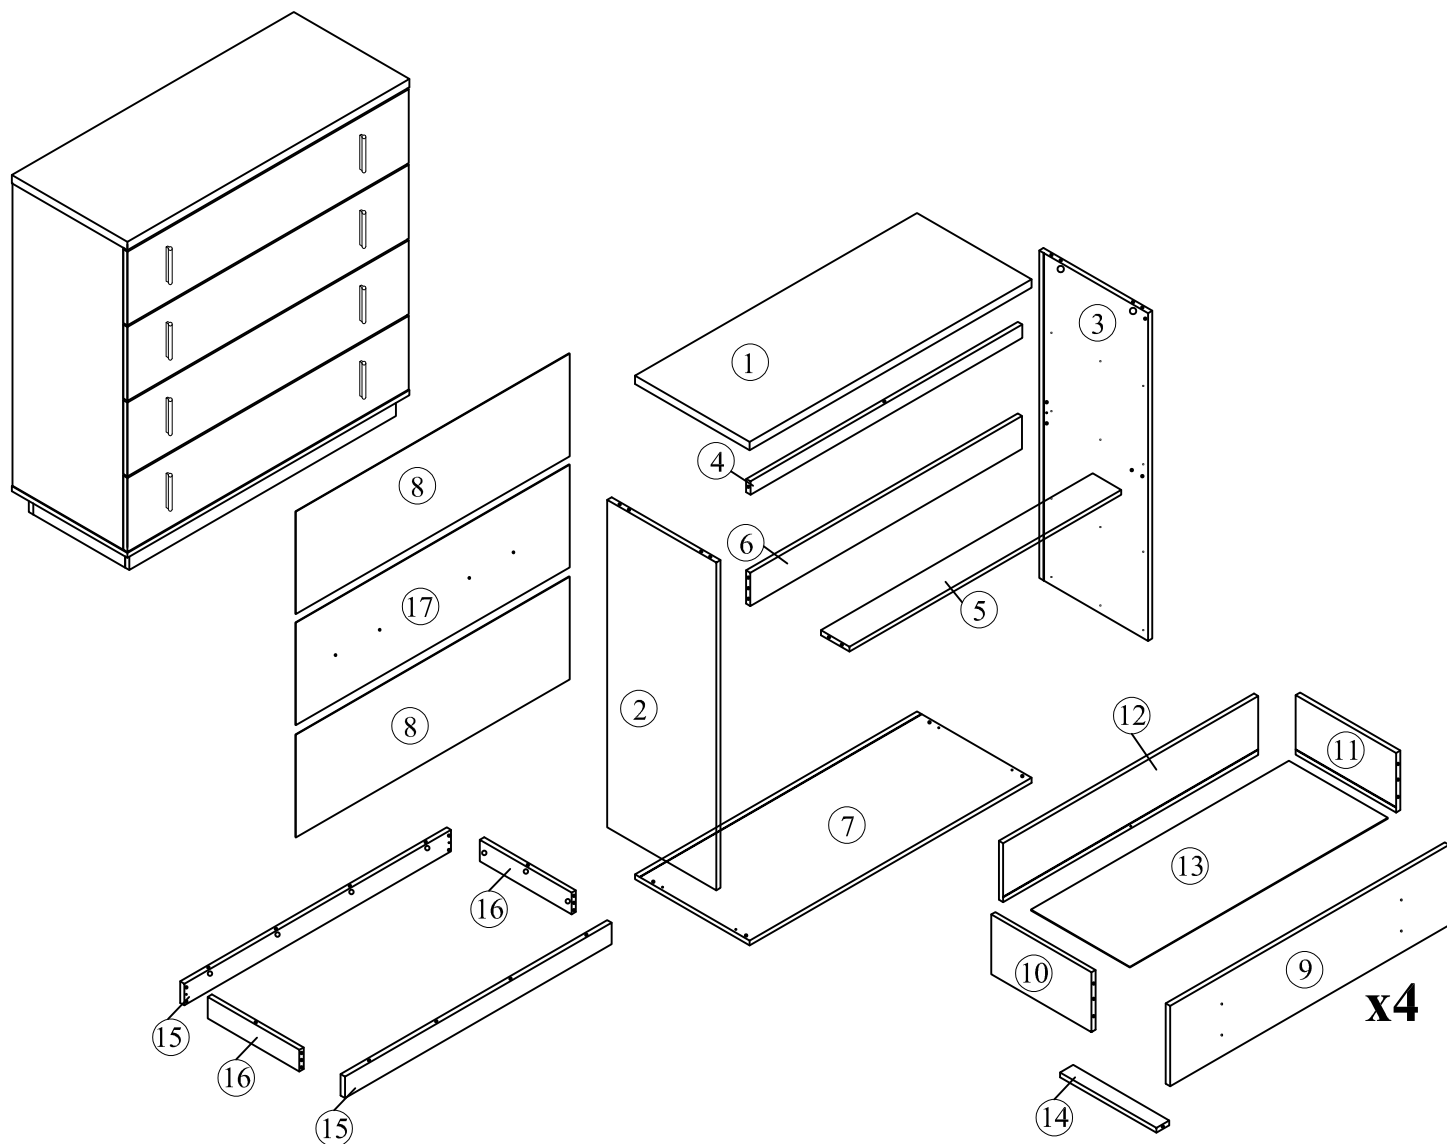


Step 1

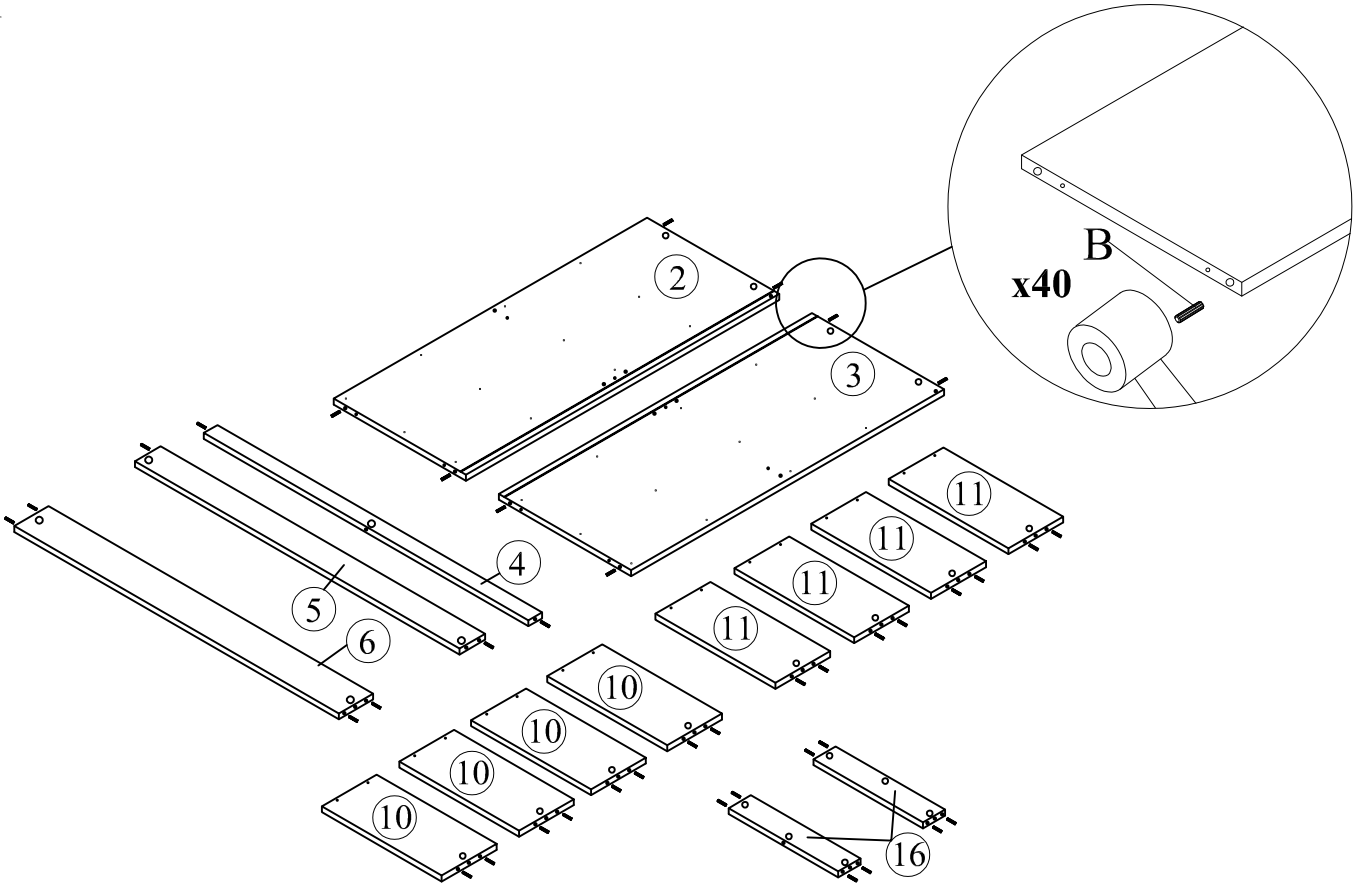


Step 2

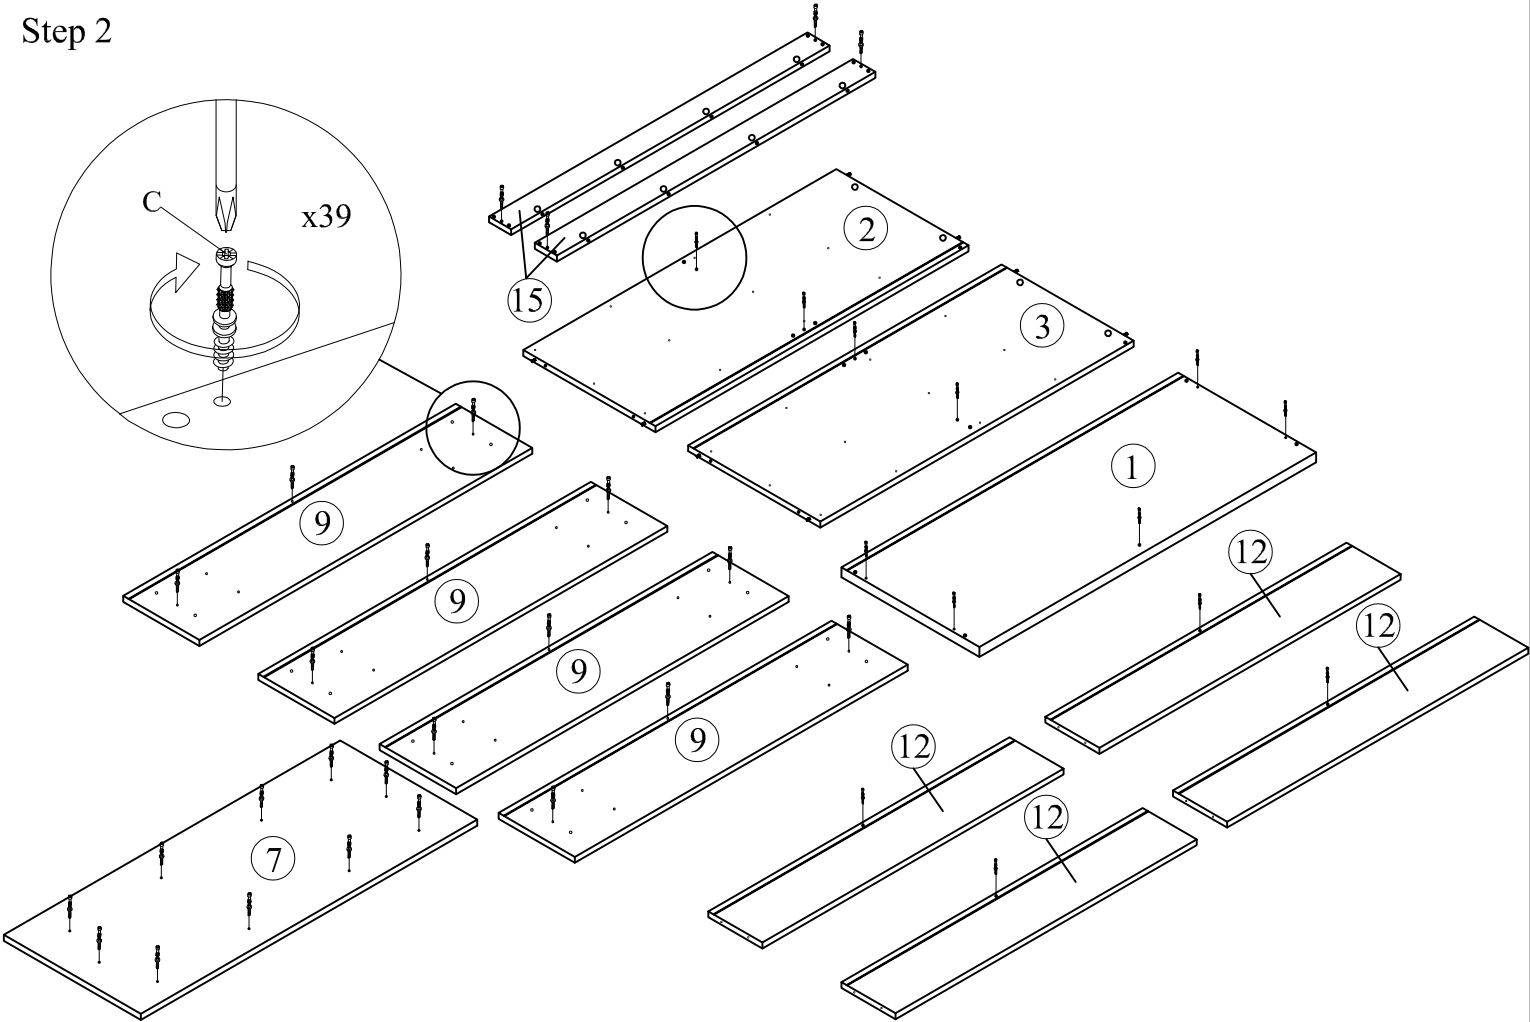

Step 3

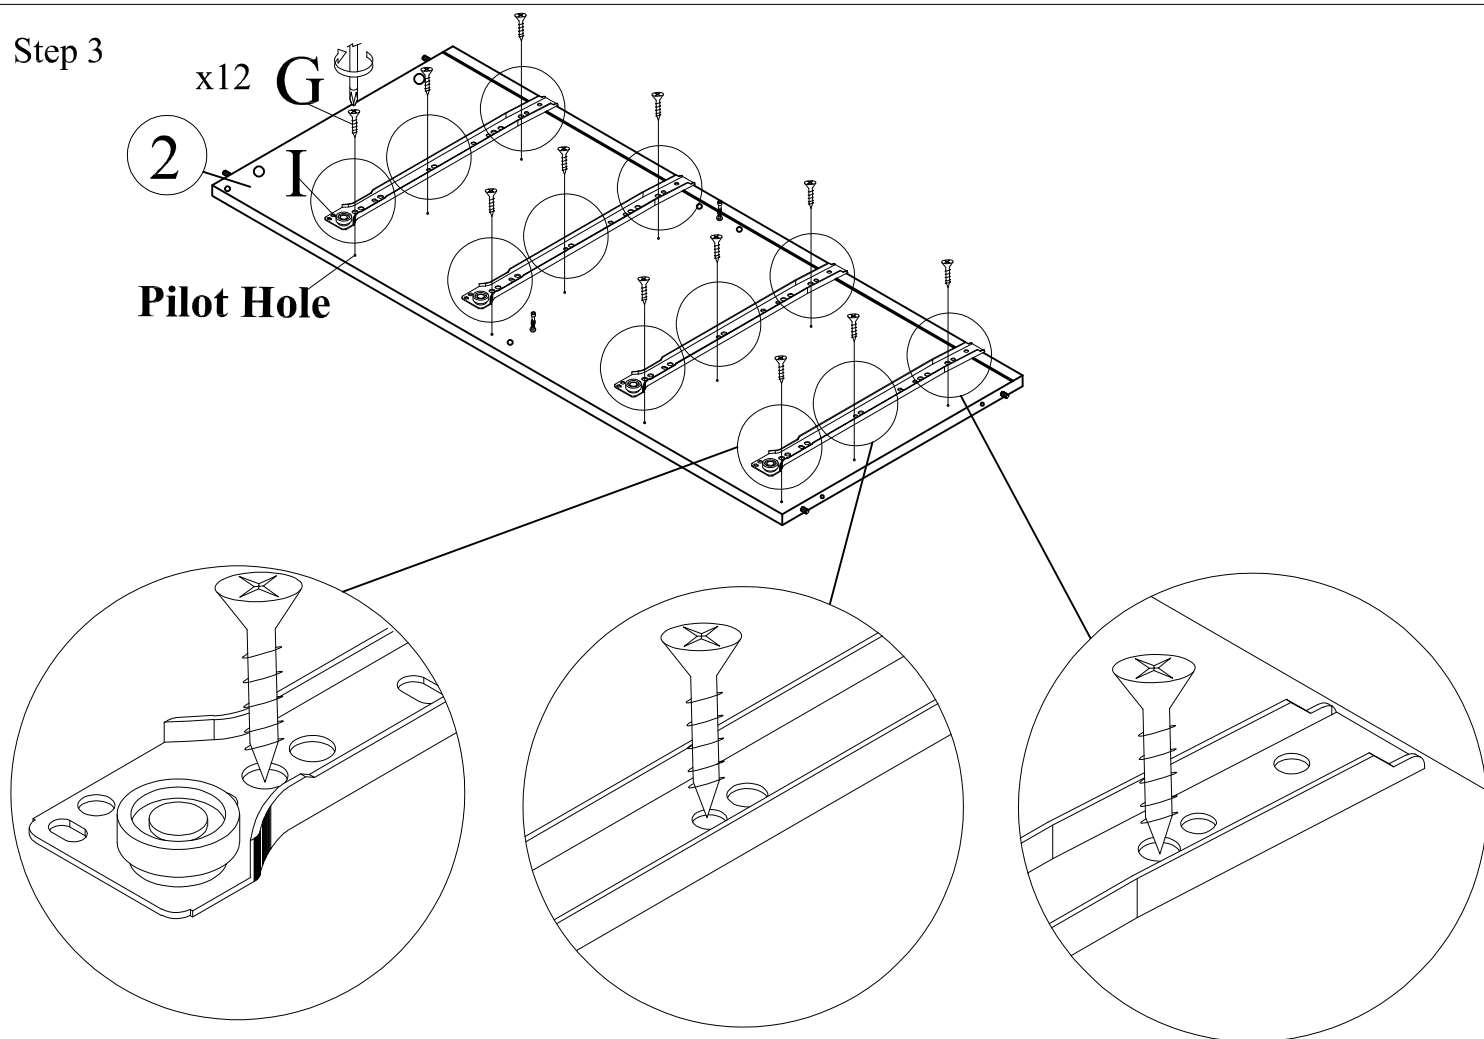

Step 4

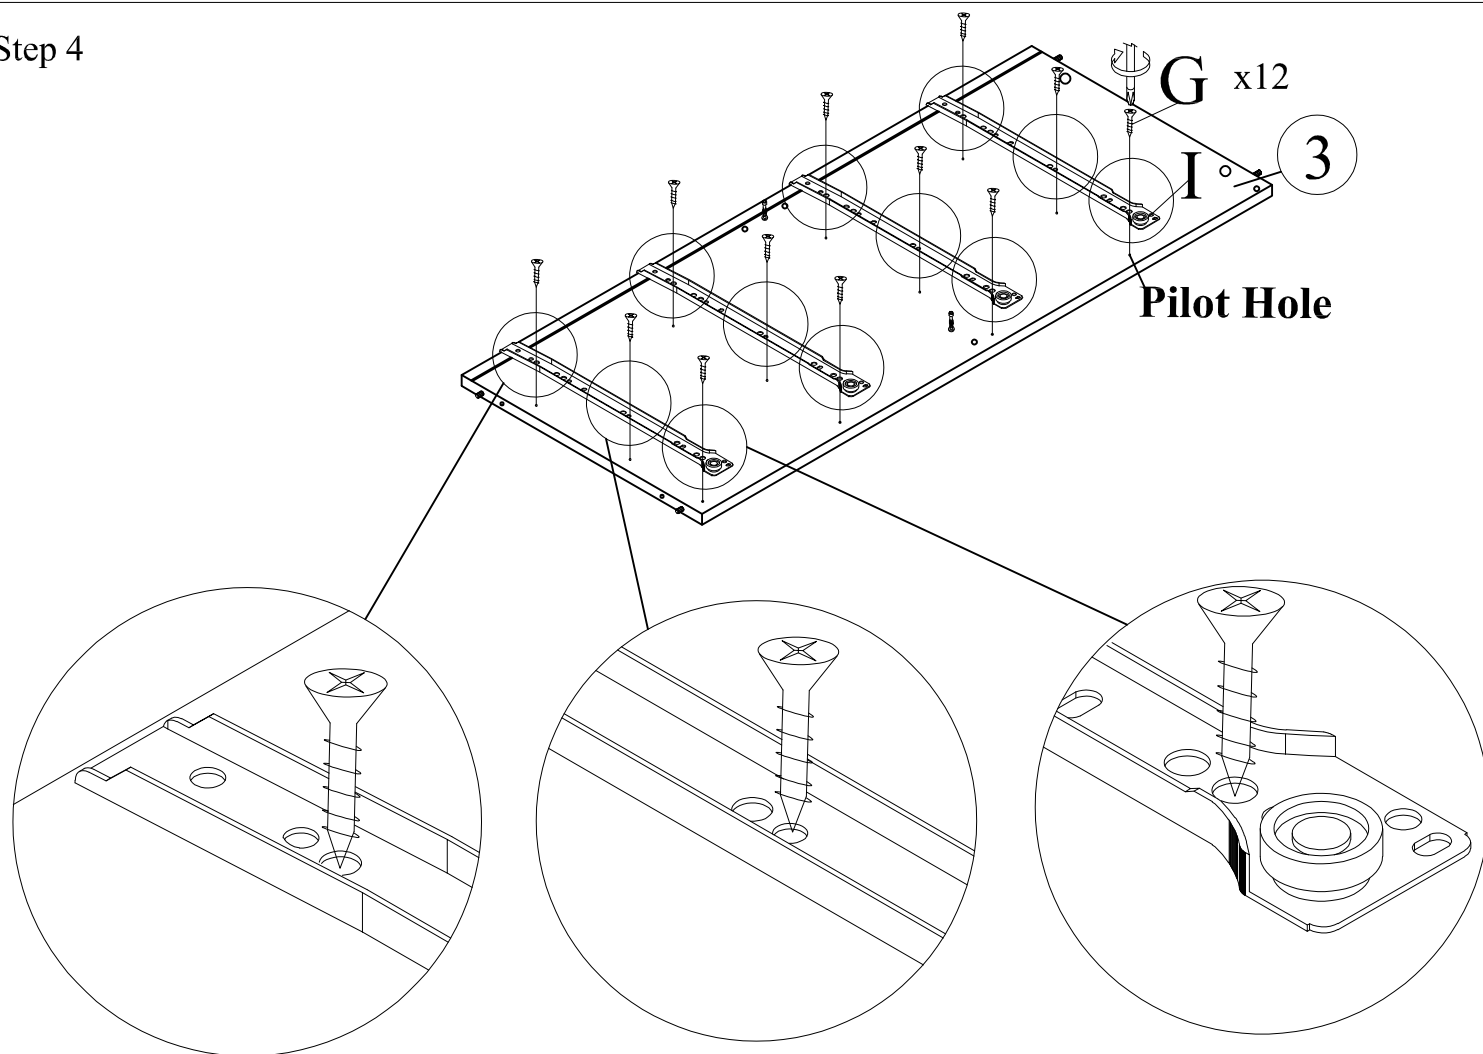



Step 5

BACK VIEW

This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

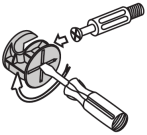

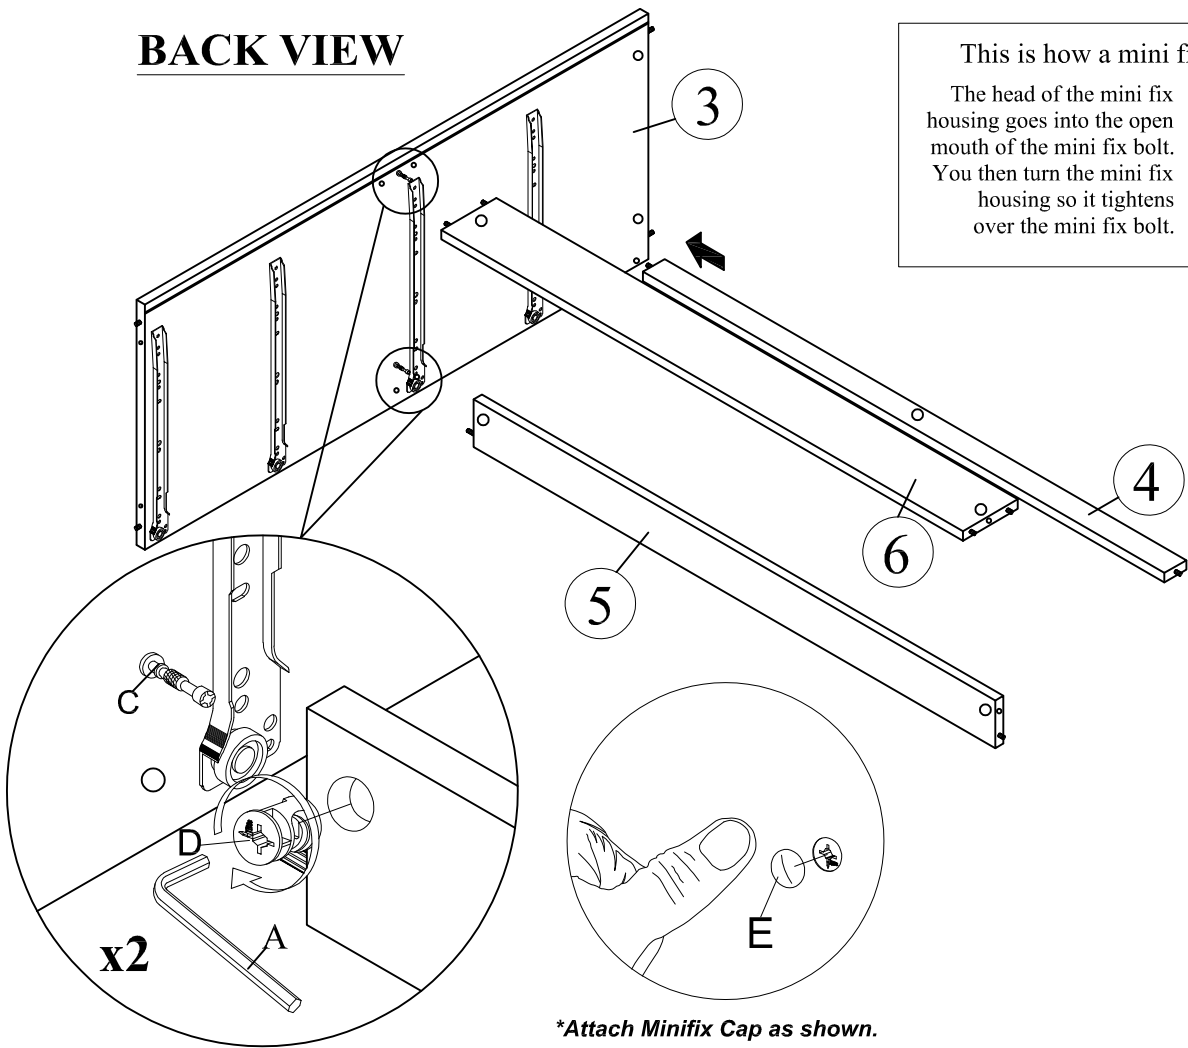

**Attach Minifix Cap as shown.*


Step 6

BACK VIEW

This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.



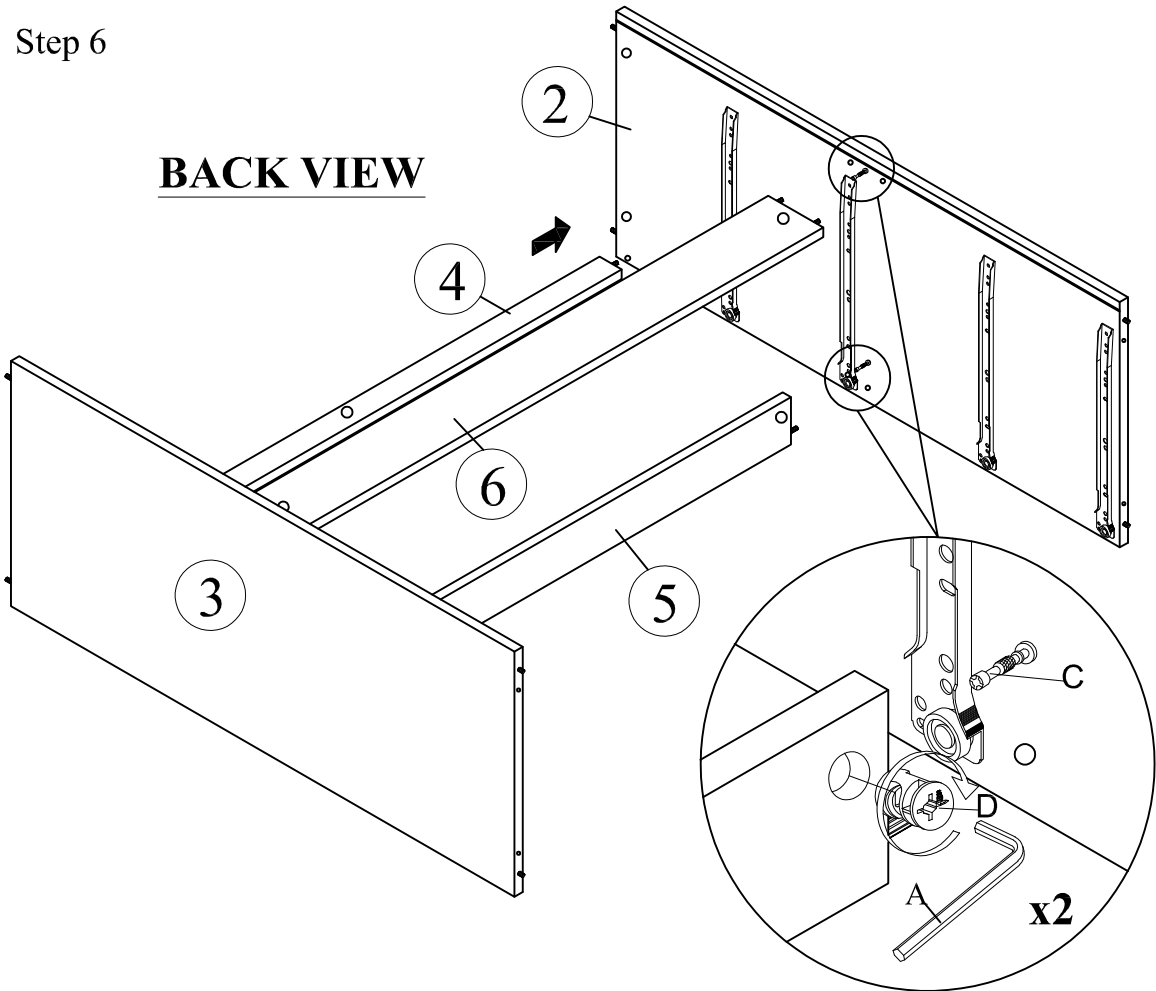

**Attach Minifix Cap as shown.*


Step 7

This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.




BACK VIEW

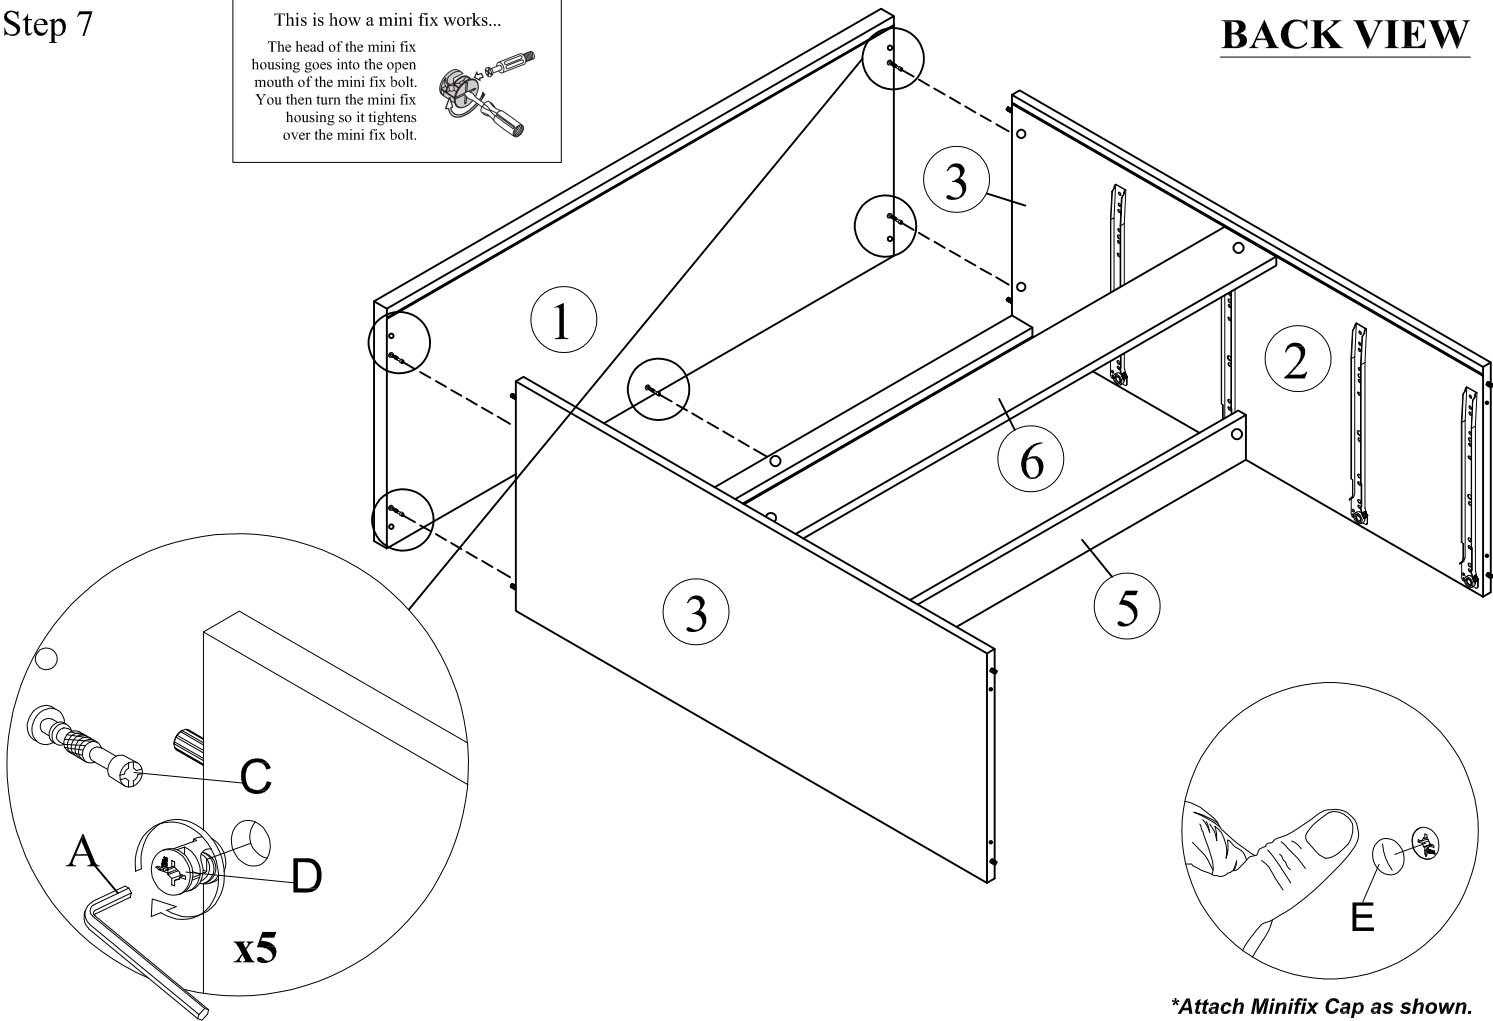

*Attach Minifix Cap as shown.


Step 8

BACK VIEW

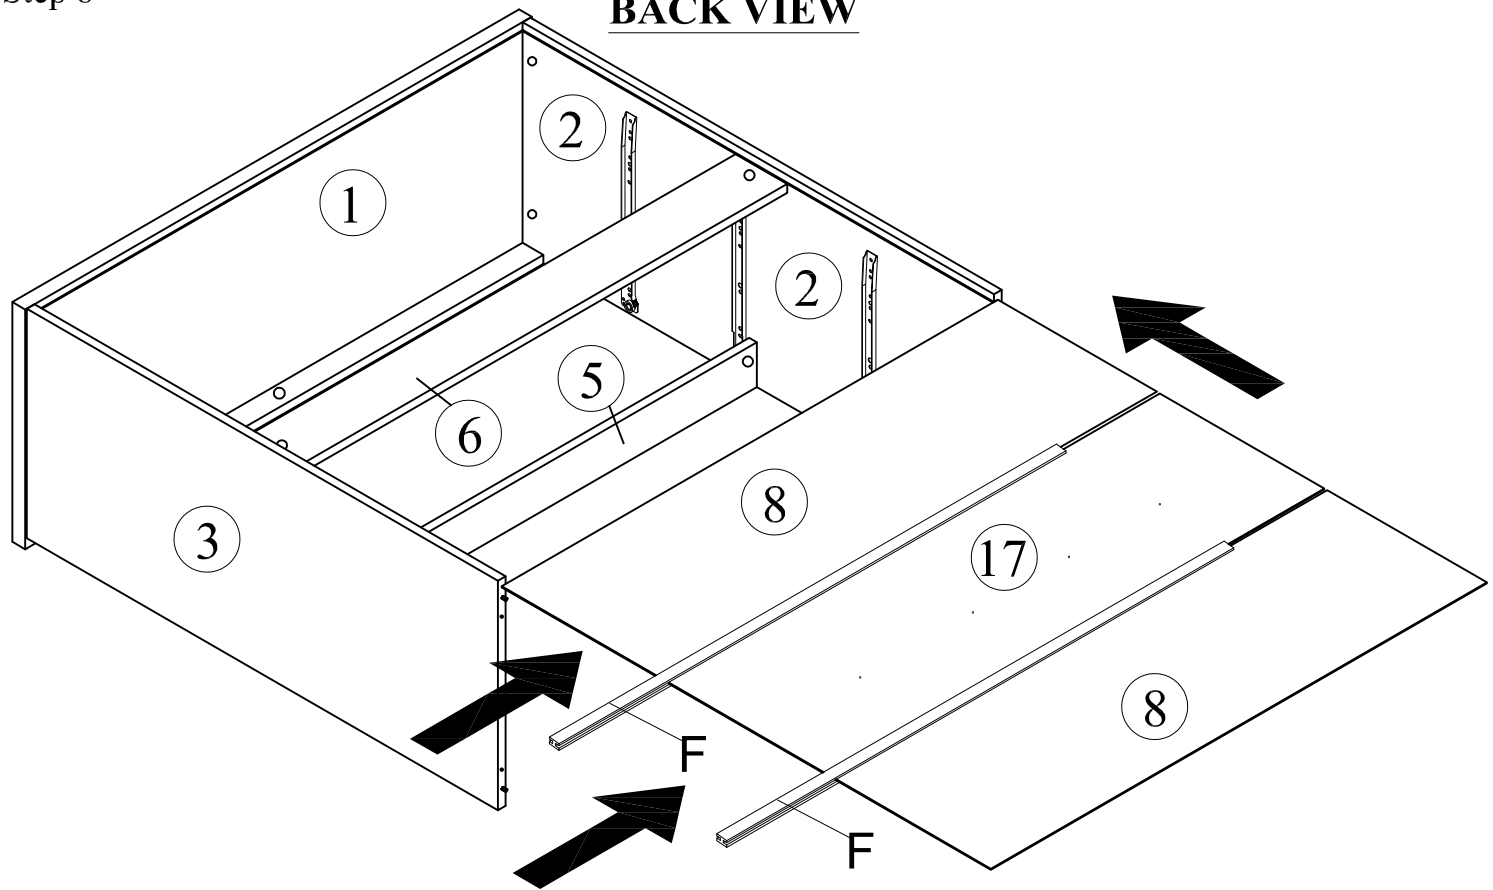


Step 9

BACK VIEW

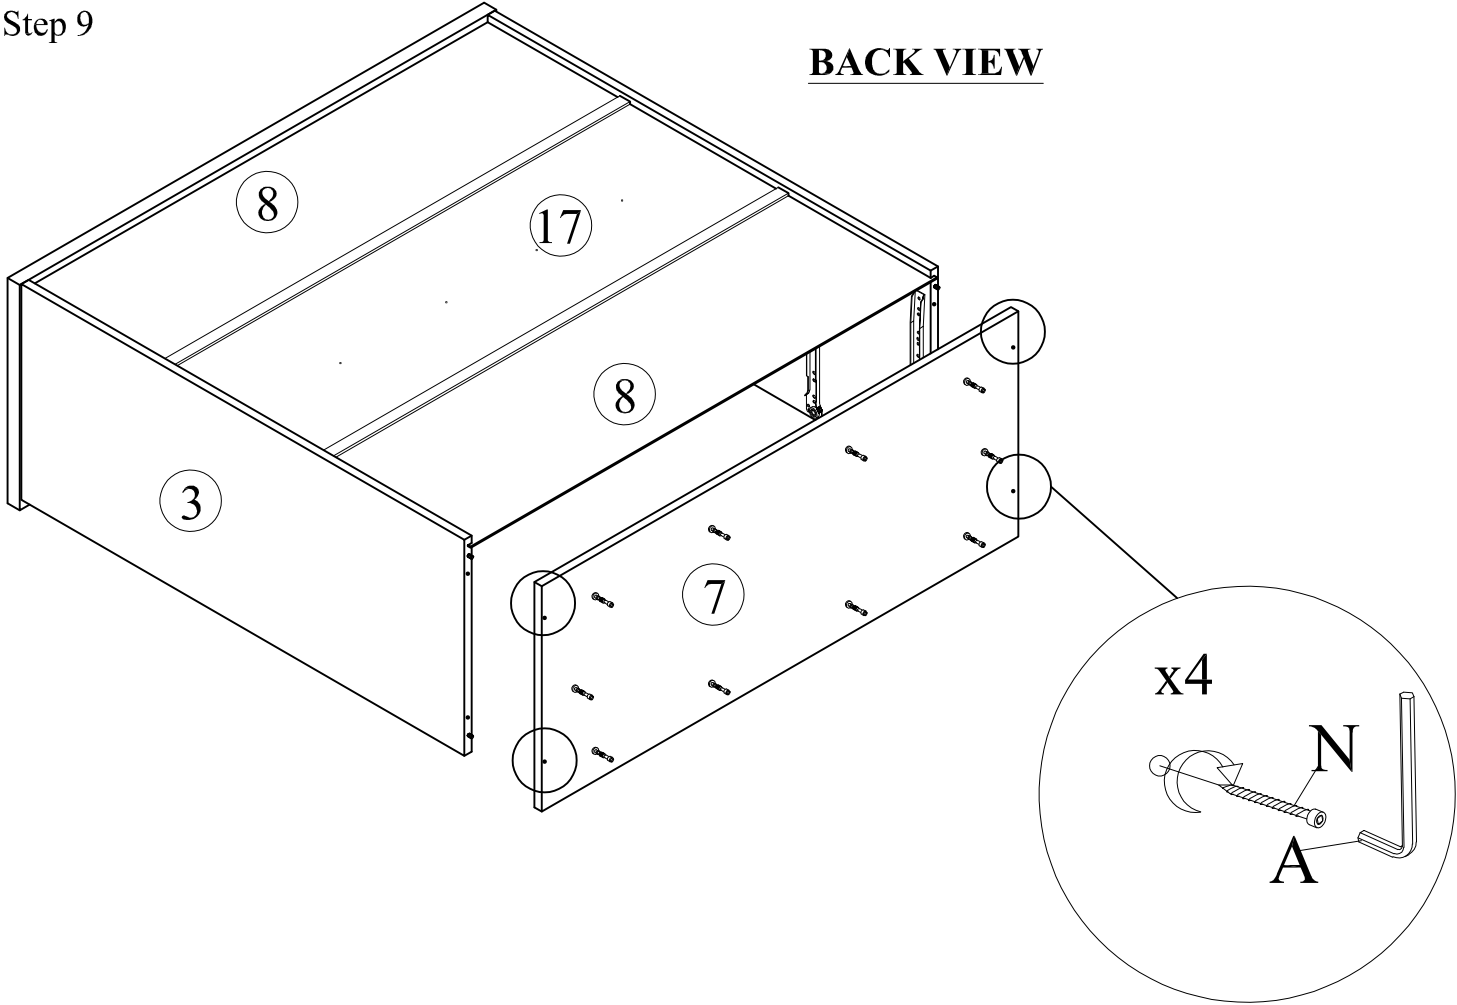



Step 10

BACK VIEW

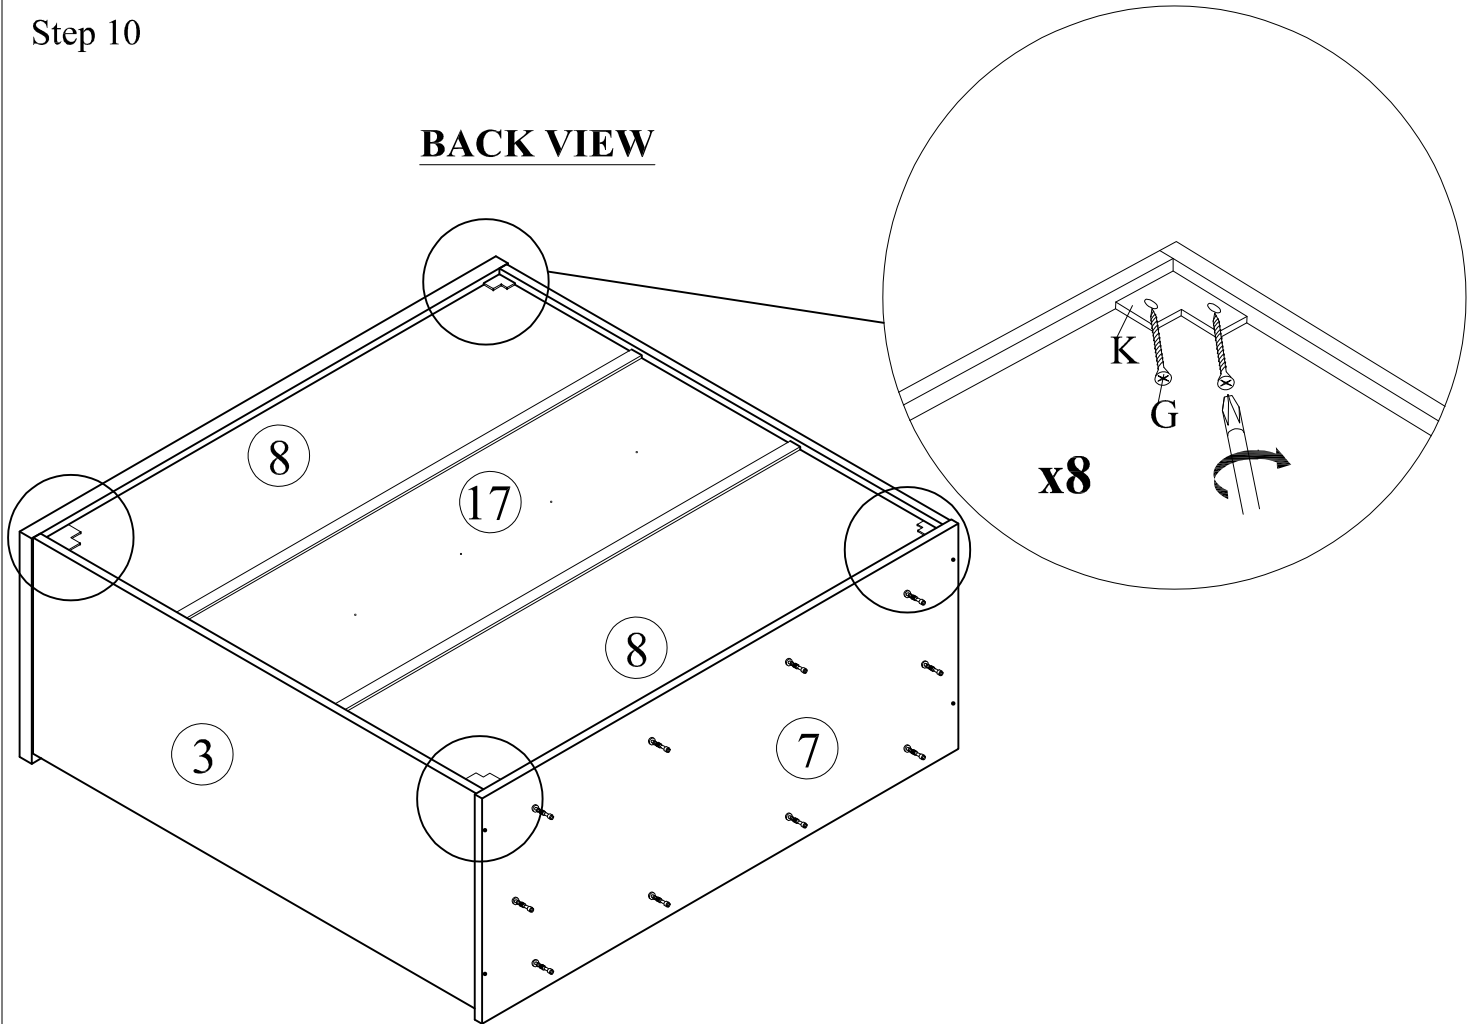



Step 11

BACK VIEW

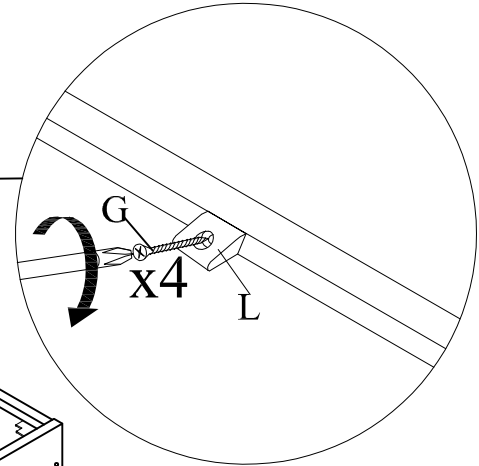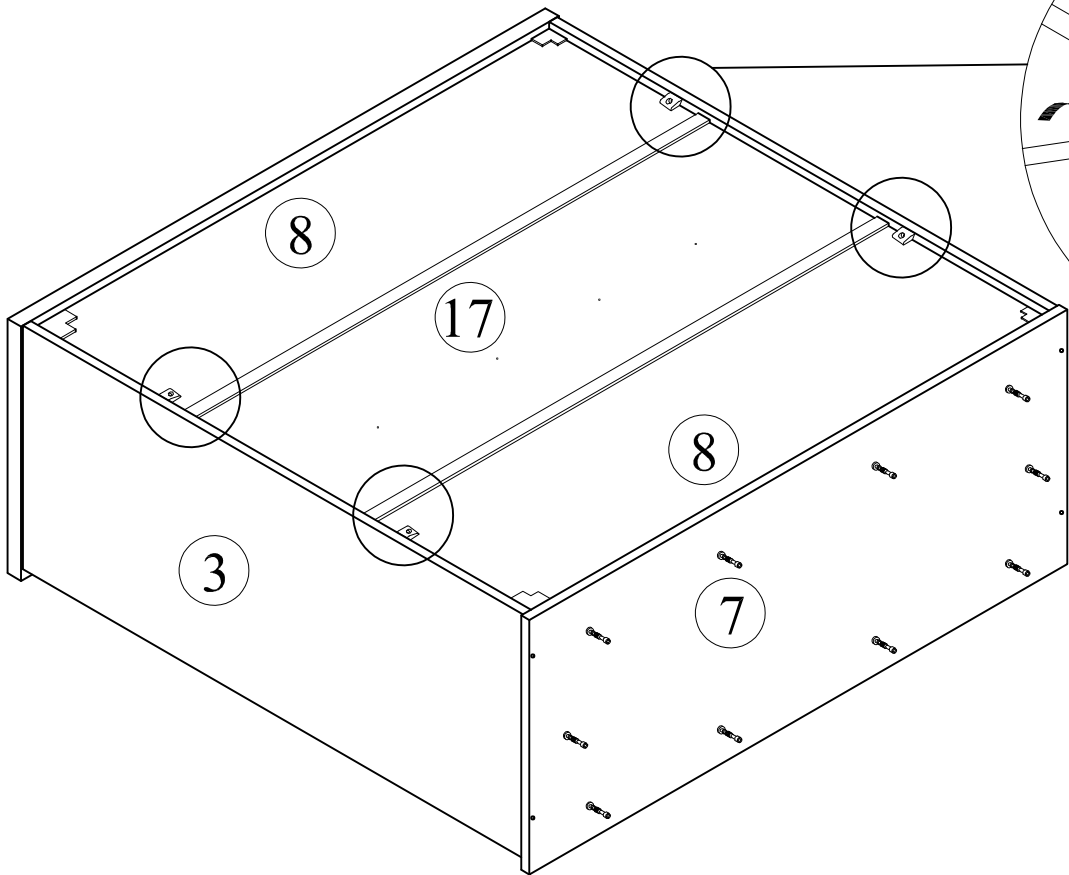

Step 12



BACK VIEW

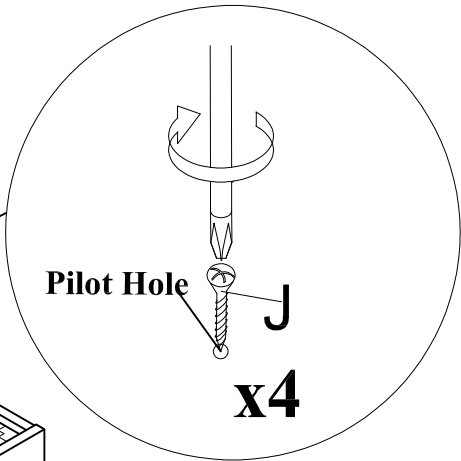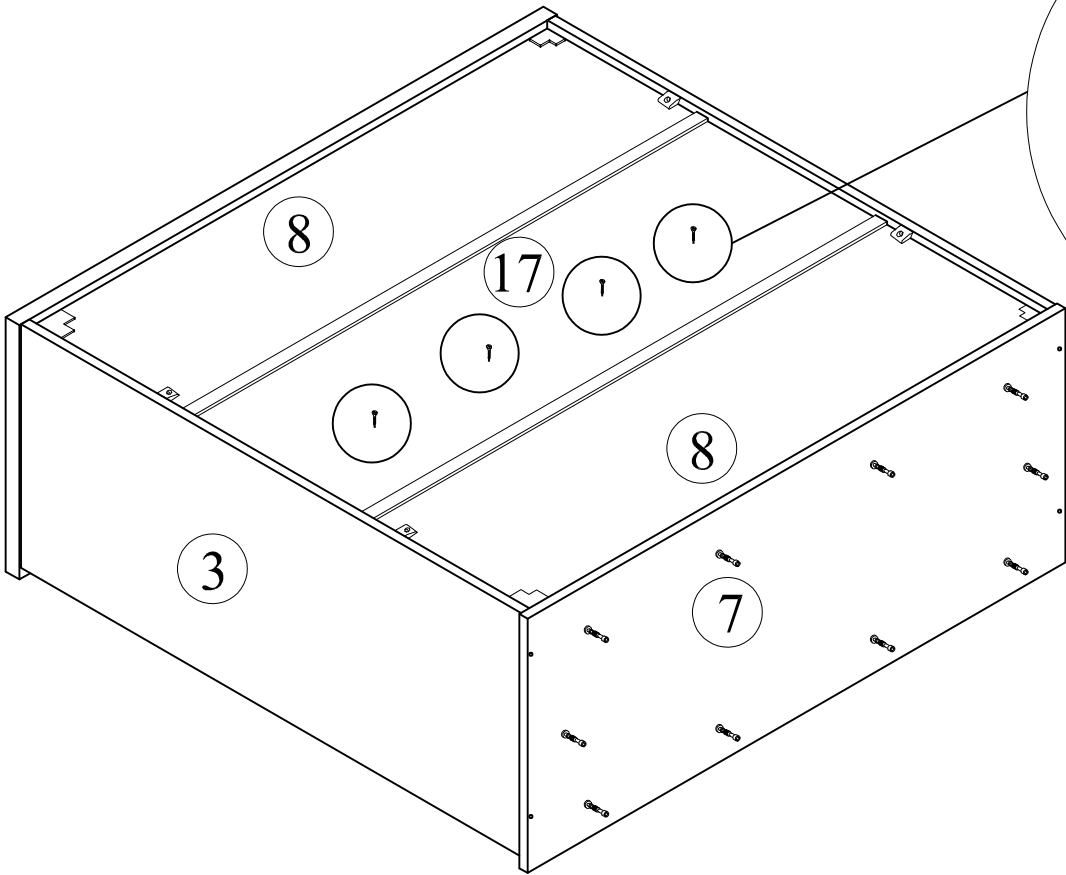

Step 13

This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

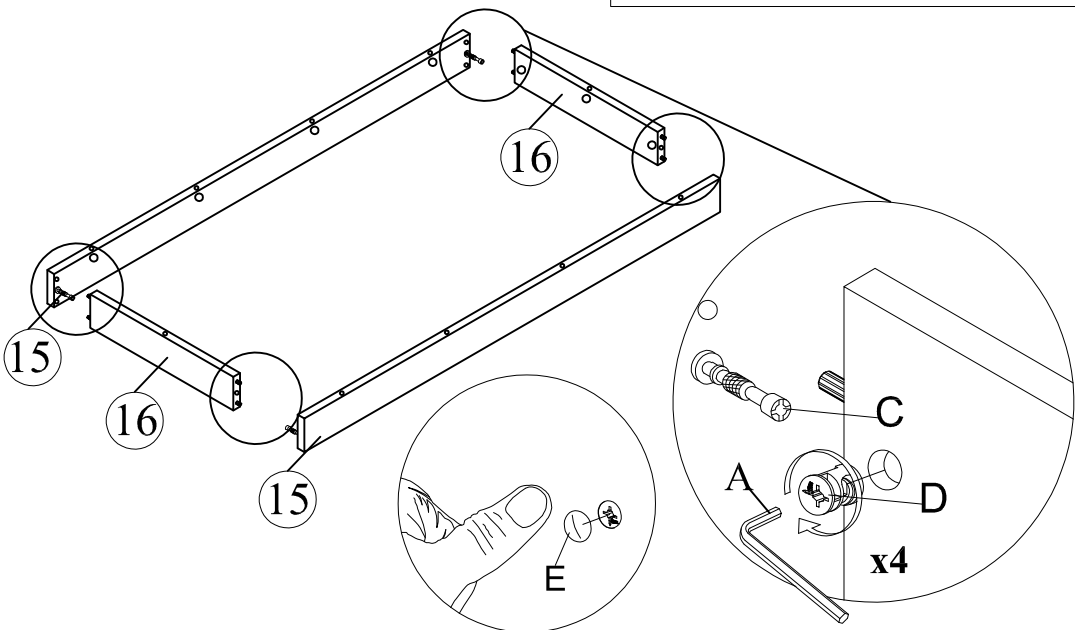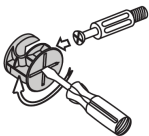


**Attach Minifix Cap as shown.*


Step 14

This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

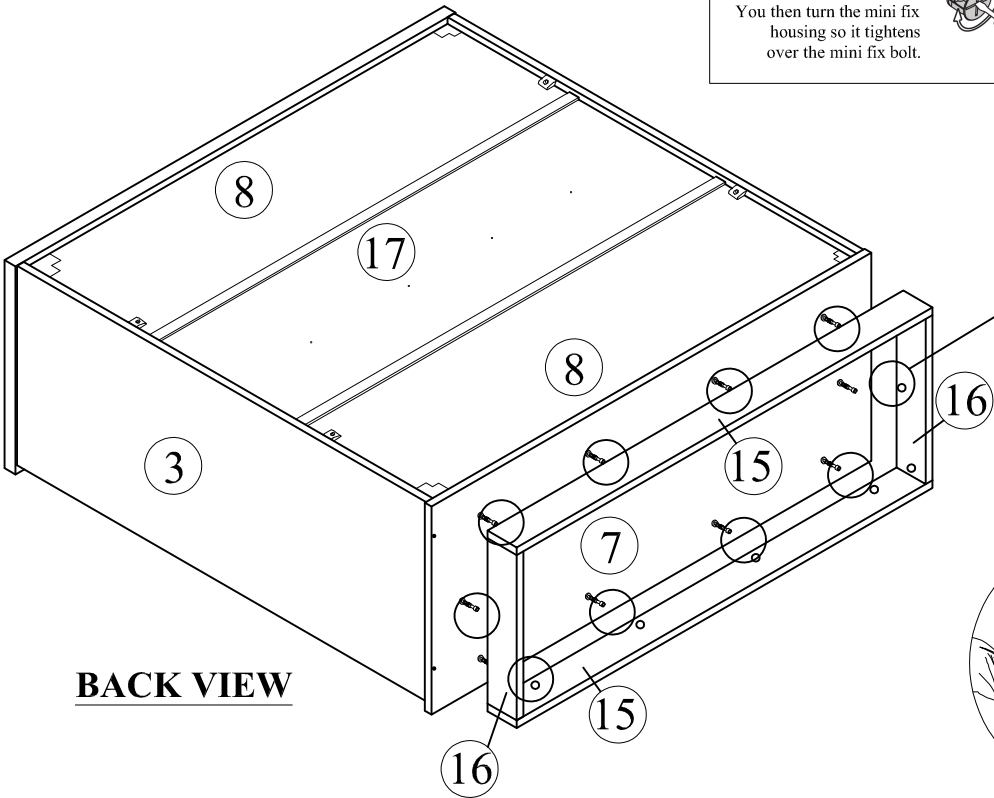


BACK VIEW

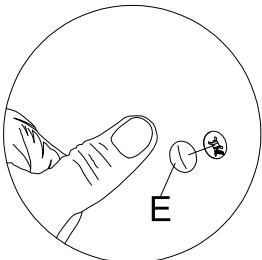


**Attach Minifix Cap as shown.*

Step 15

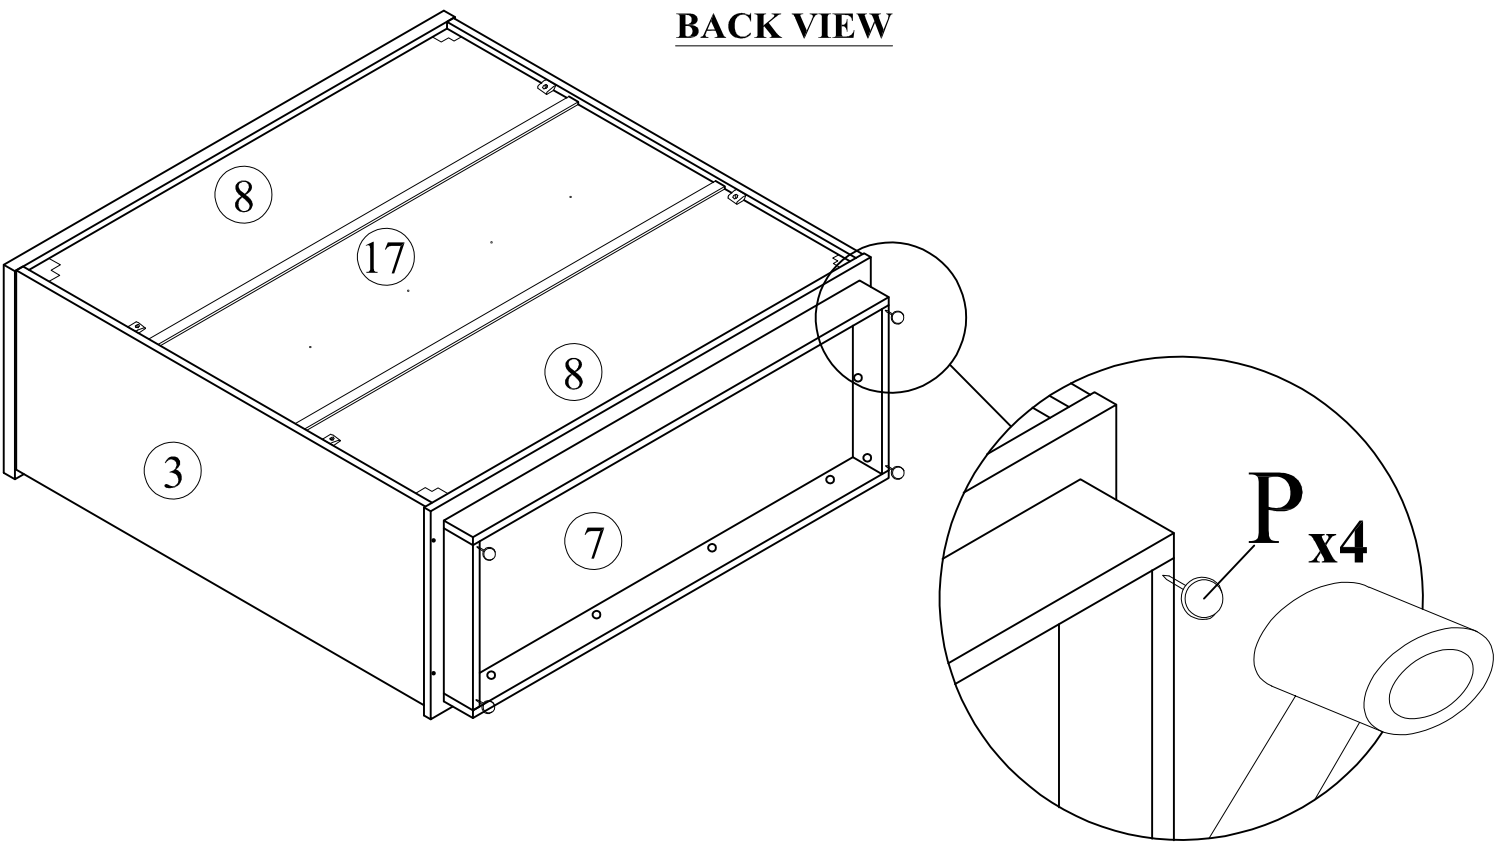

Step 16

Step 16.1

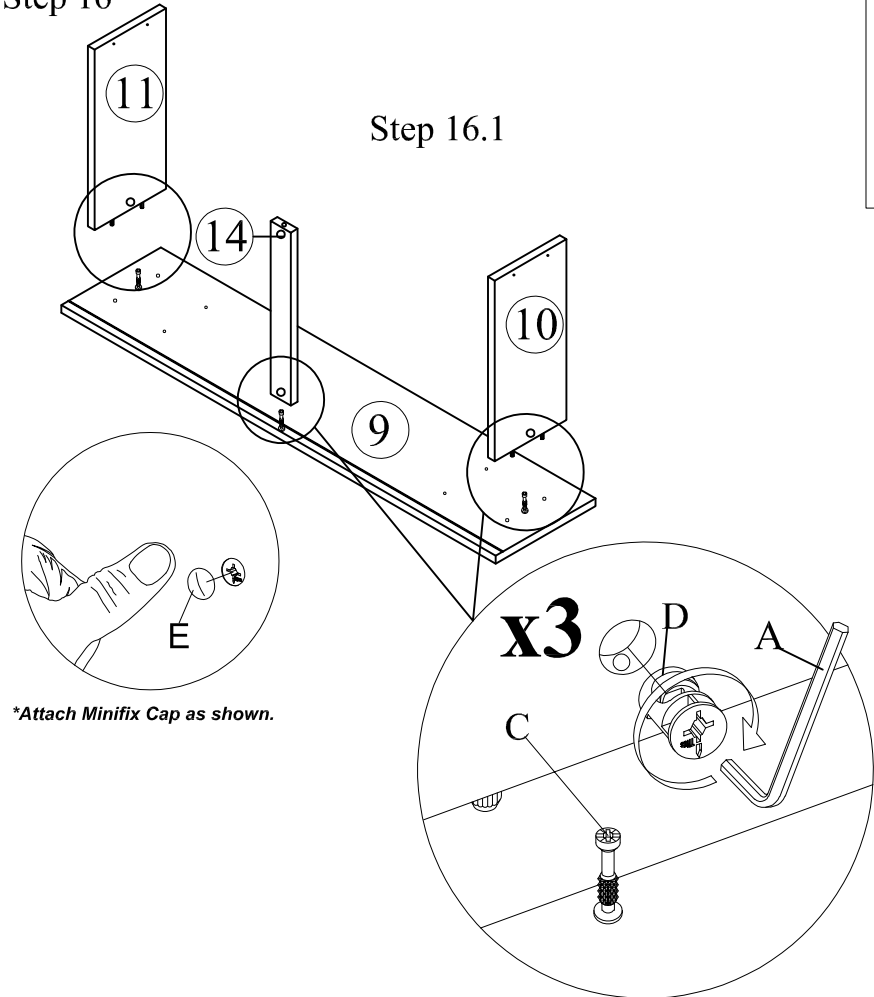


This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

x4

Step 16.2

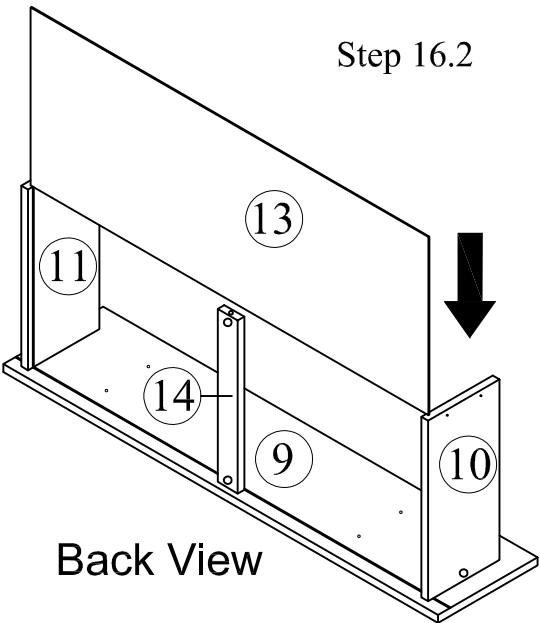


Step 17

x4

Step 17.1


Step 17.2

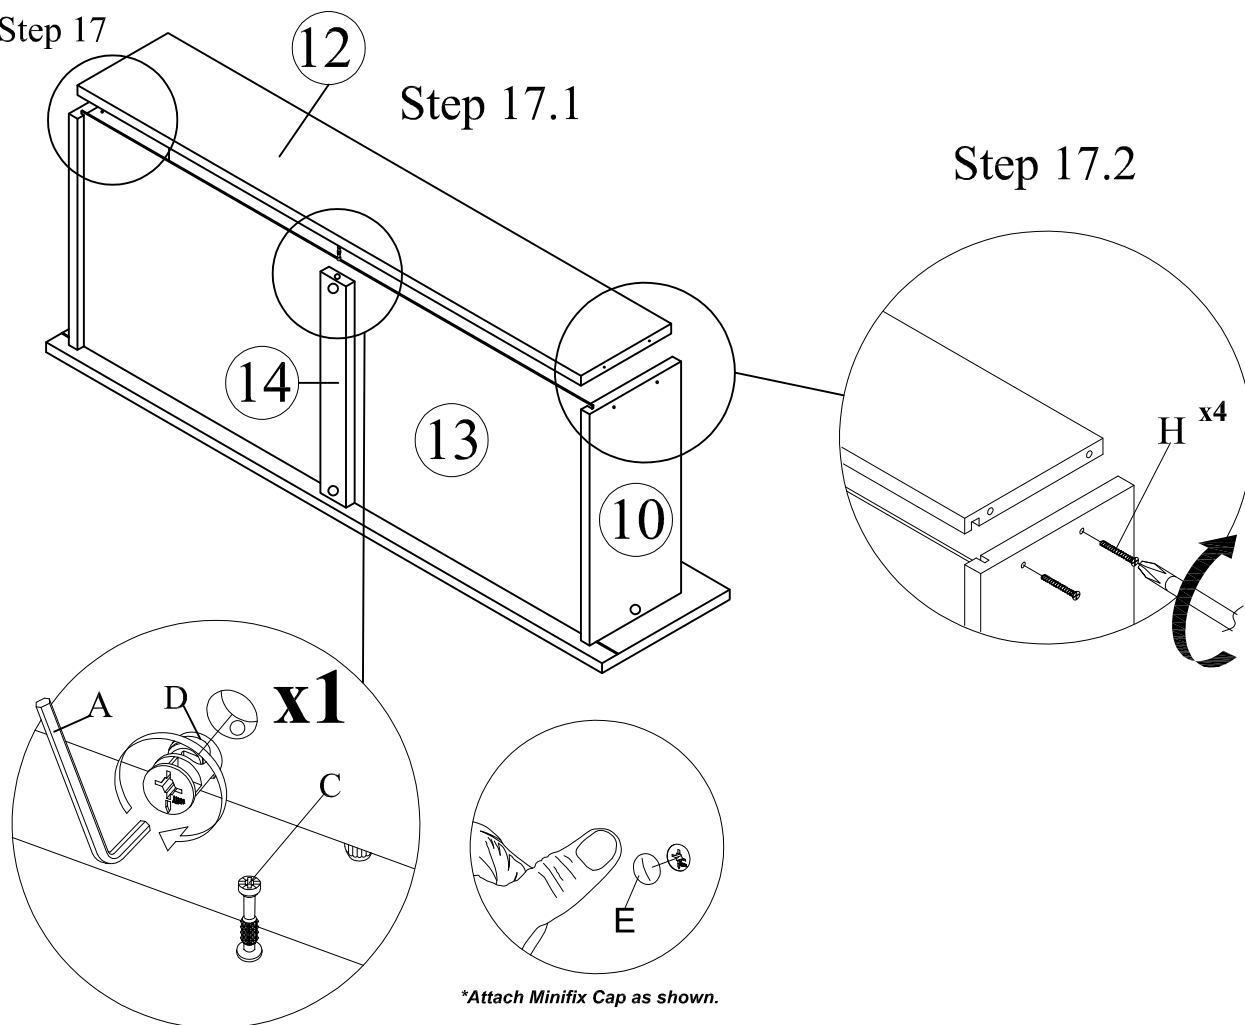

**Attach Minifix Cap as shown.*

Step 18


x4

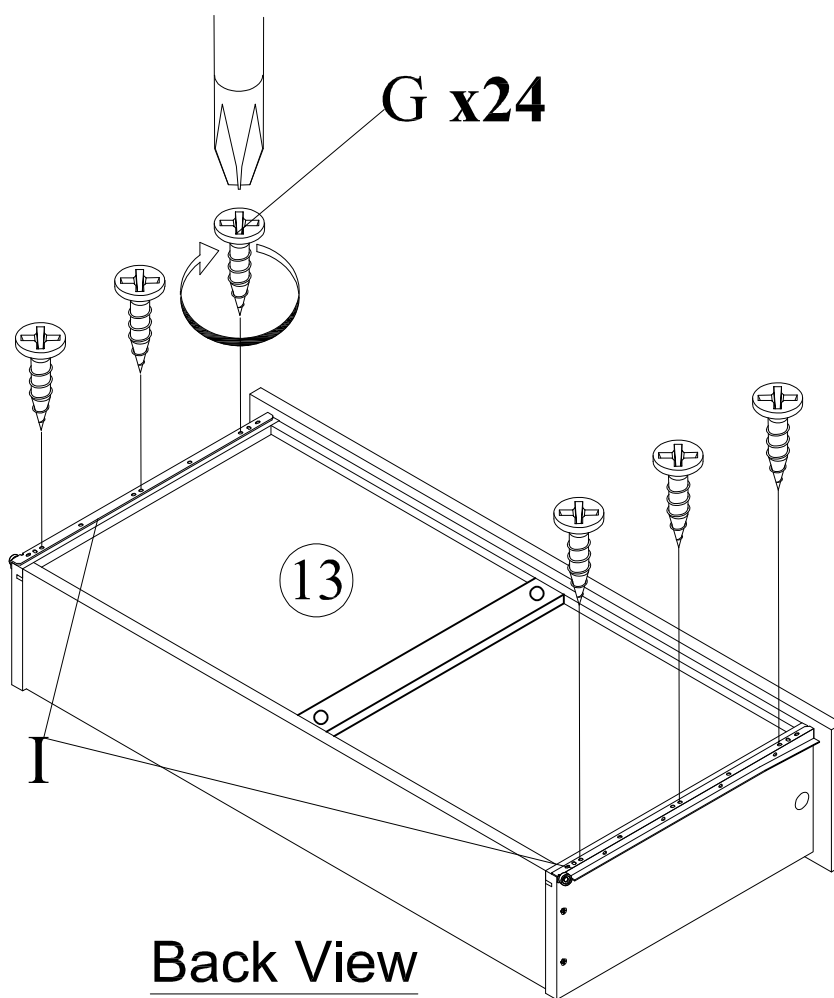


Back View

Step 19

x4

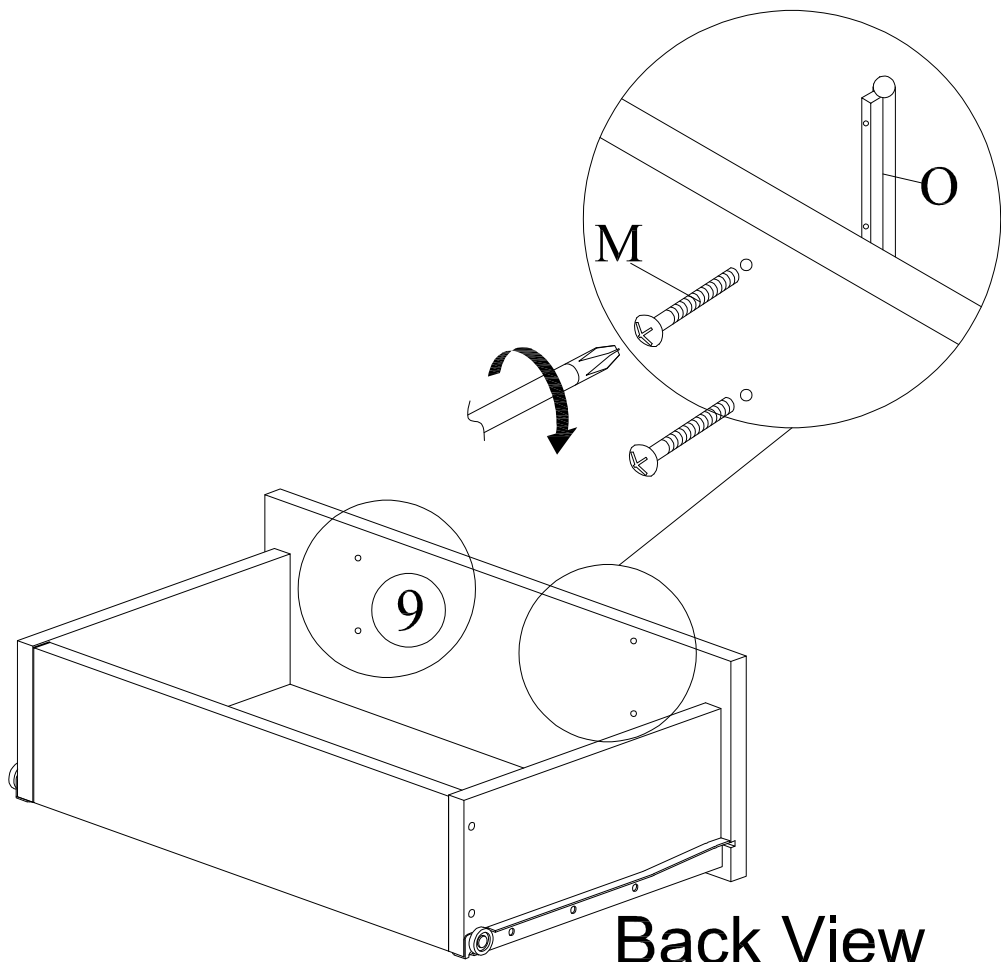

Step 20

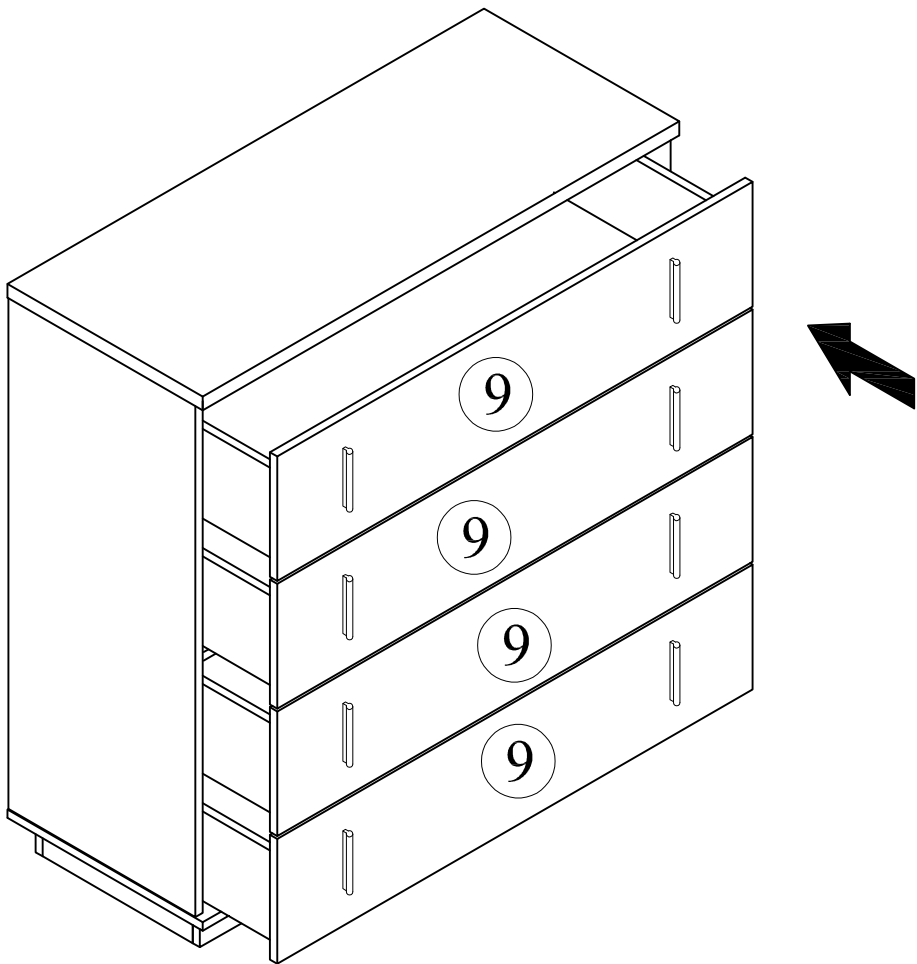


Anti -
Tipping

(A)



CSK Screw
M3.5x16mm
1PC

(B)



CSK Screw
M4x50mm
1PC

(C)





L BRACKET
2PCS


(D)






CABLE TIE
1PC

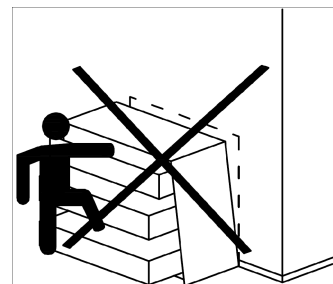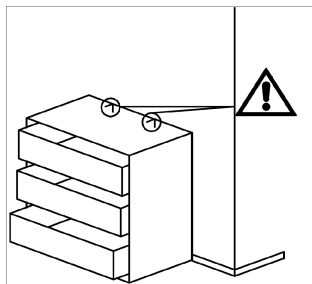

BACK VIEW

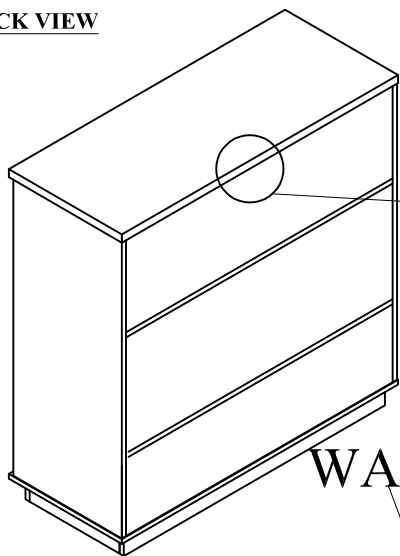

WALL

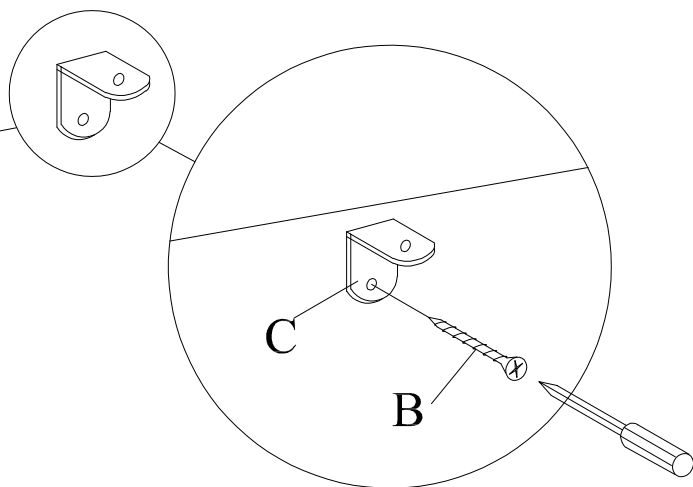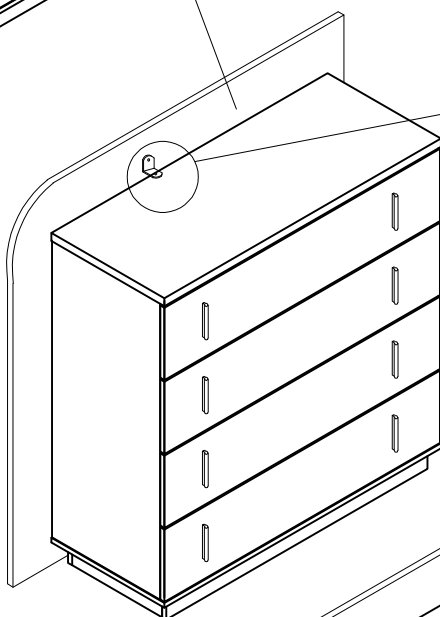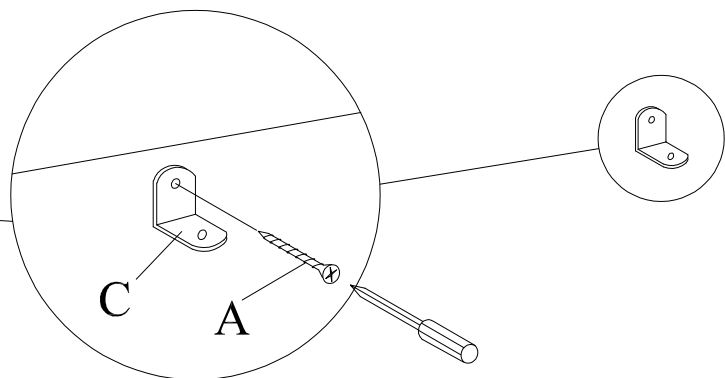

WALL

