



Assembly Instructions

ECOLIFE


MODEL : MPC 8038-B-BONITA SERIES MULTI PURPOSE CABINET

Part List	QTY
1 Top Panel	1
2 Left Side Panel	1
3 Right Side Panel	1
4 Left Middle Panel	1
5 Right Middle Panel	1
6 Center Panel	1
7 Front Support Panel	1
8 Shelf Panel	2
9 Bottom Panel	1
10 Back Panel	2
11 Metal Legs	2
12 Metal Support Legs	2
13 Left Door Panel	1
14 Right Door Panel	1
15 Drawer Front Panel	2
16 Drawer Side Panel (L)	2
17 Drawer Side Panel (R)	2
18 Drawer Back Panel	2
19 Drawer Bottom Panel	2


Hardware	QTY
A Allen Key M4	1
B Plastic Dowel	32
C JCBC W Screw M6x40	8
D Mini Fix Bolt	16
E Mini Fix Housing	16
F Mini Fix Cap	16
G H Profile	1
H 5/8 Hinge	4
I Shelf Support Metal	8
J Drawer Soft Close	2 set
K CSK Screw M4x50mm	22
L CSK Screw M4x18mm (Black)	8
M CSK Screw M3.5x16mm	56
N JCBC Screw M6x50 + M6 Flat Washer	4
O L Bracket	4

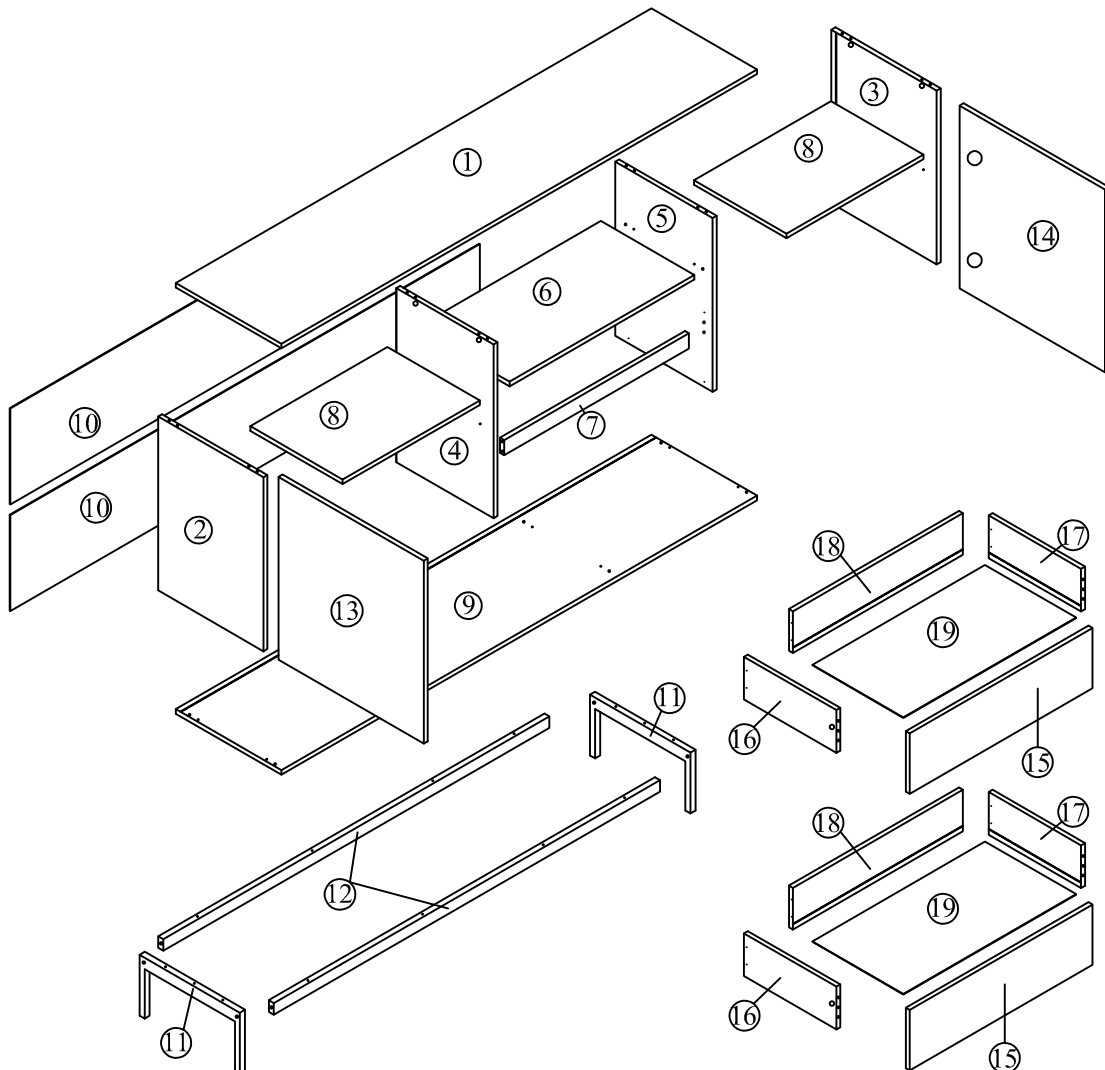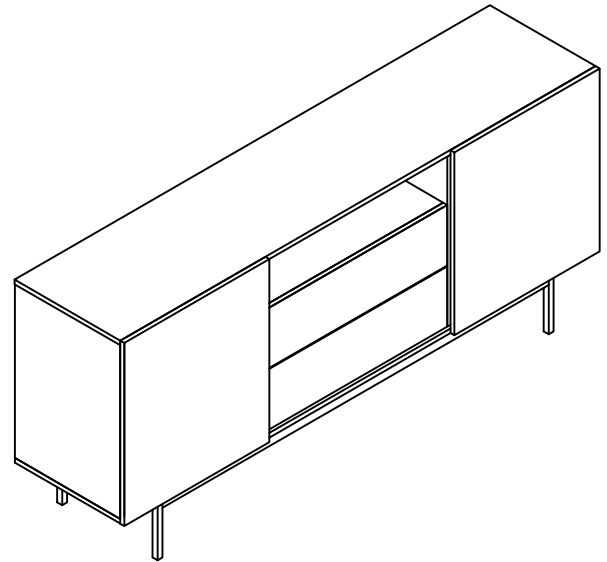


Step 1

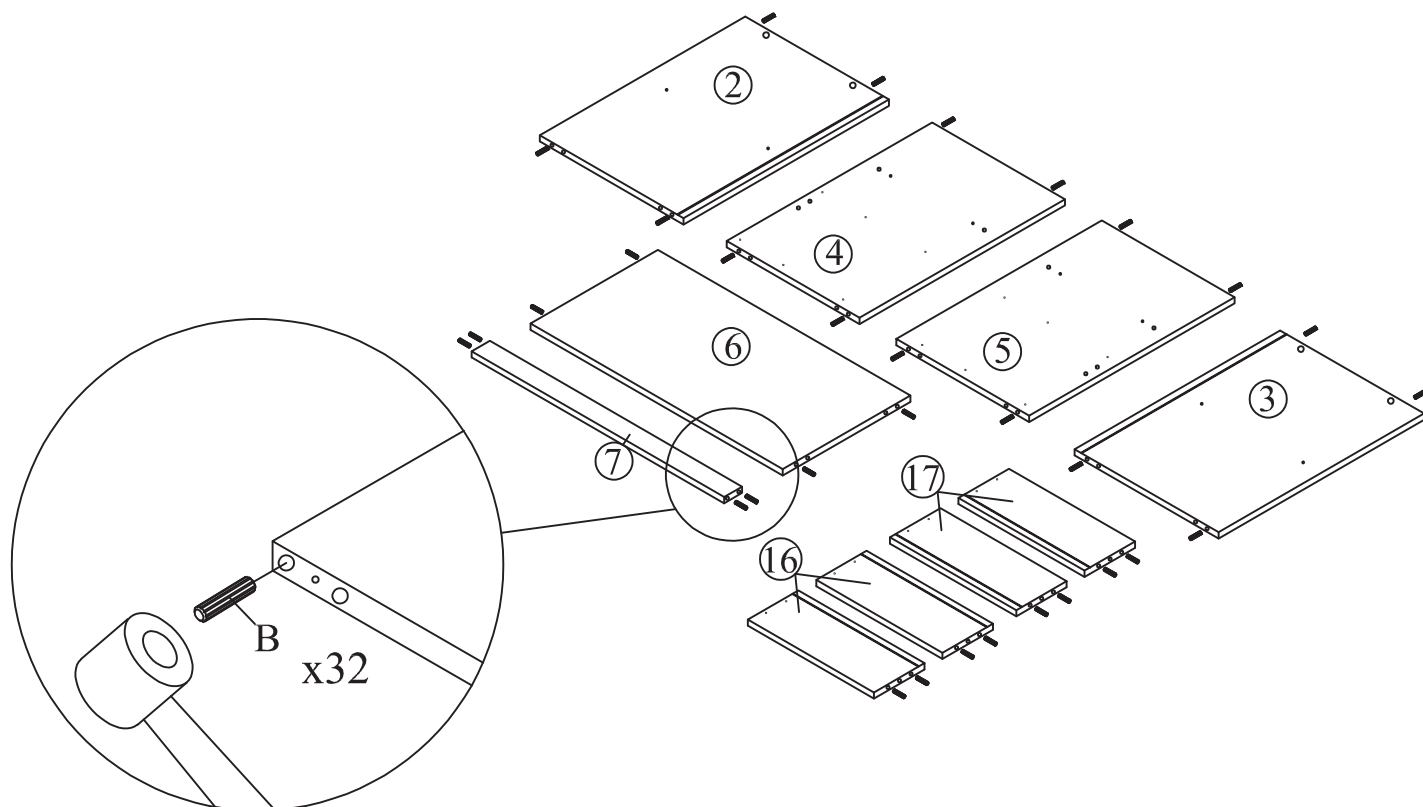


Step 2

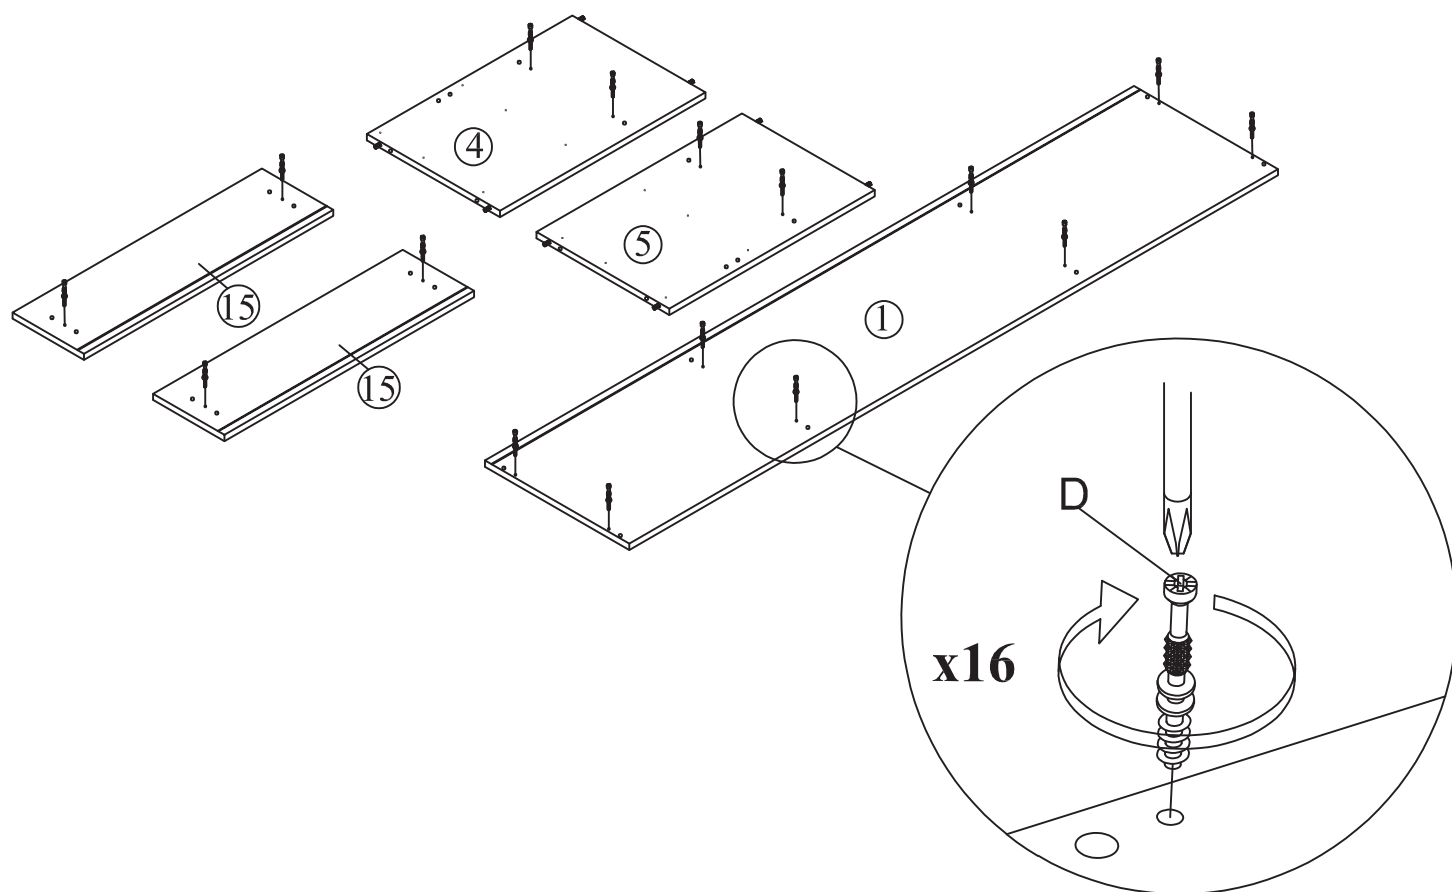


Step 3

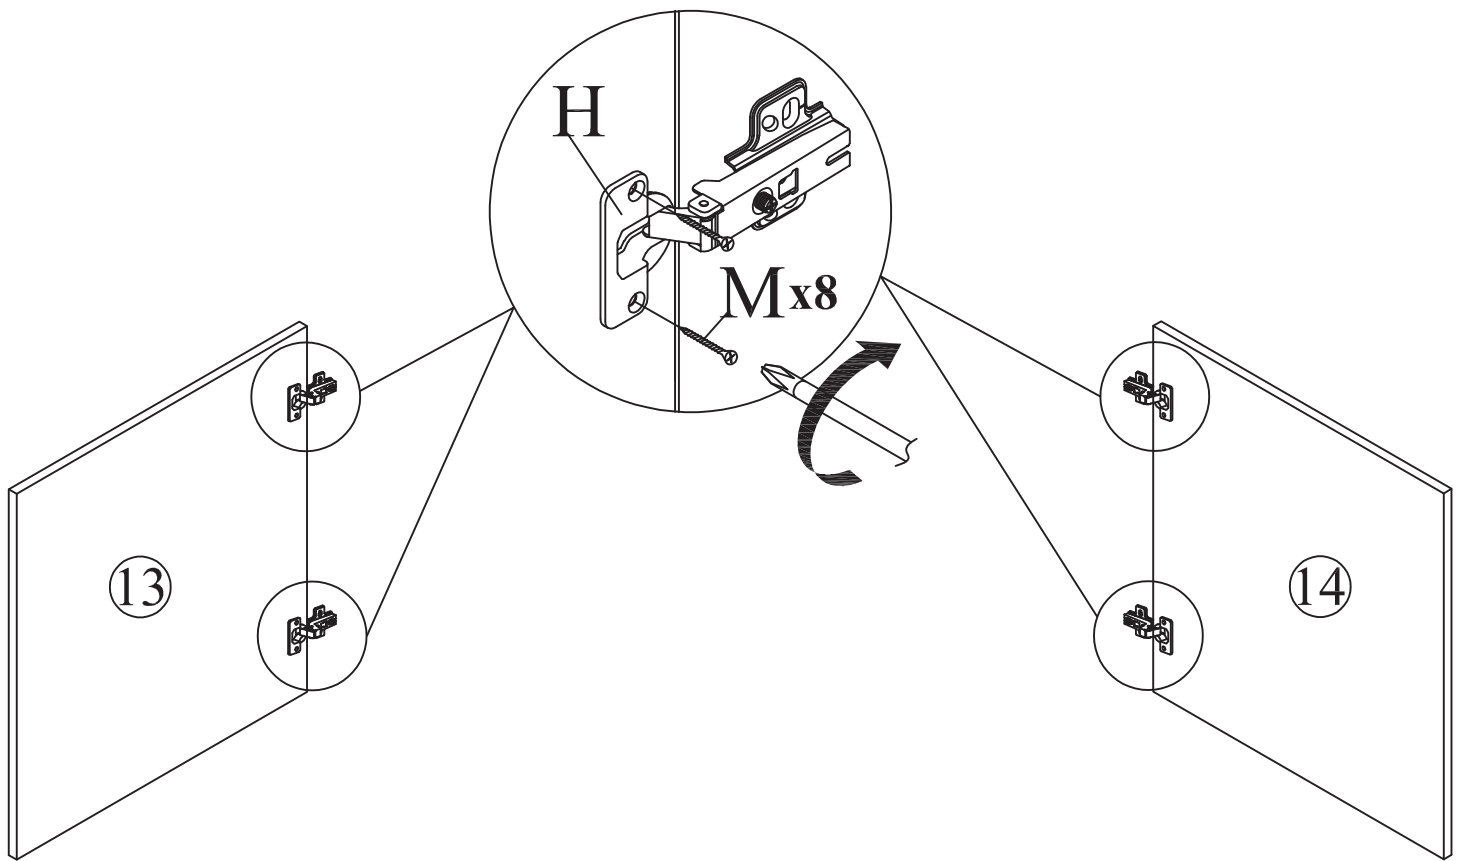



Step 4

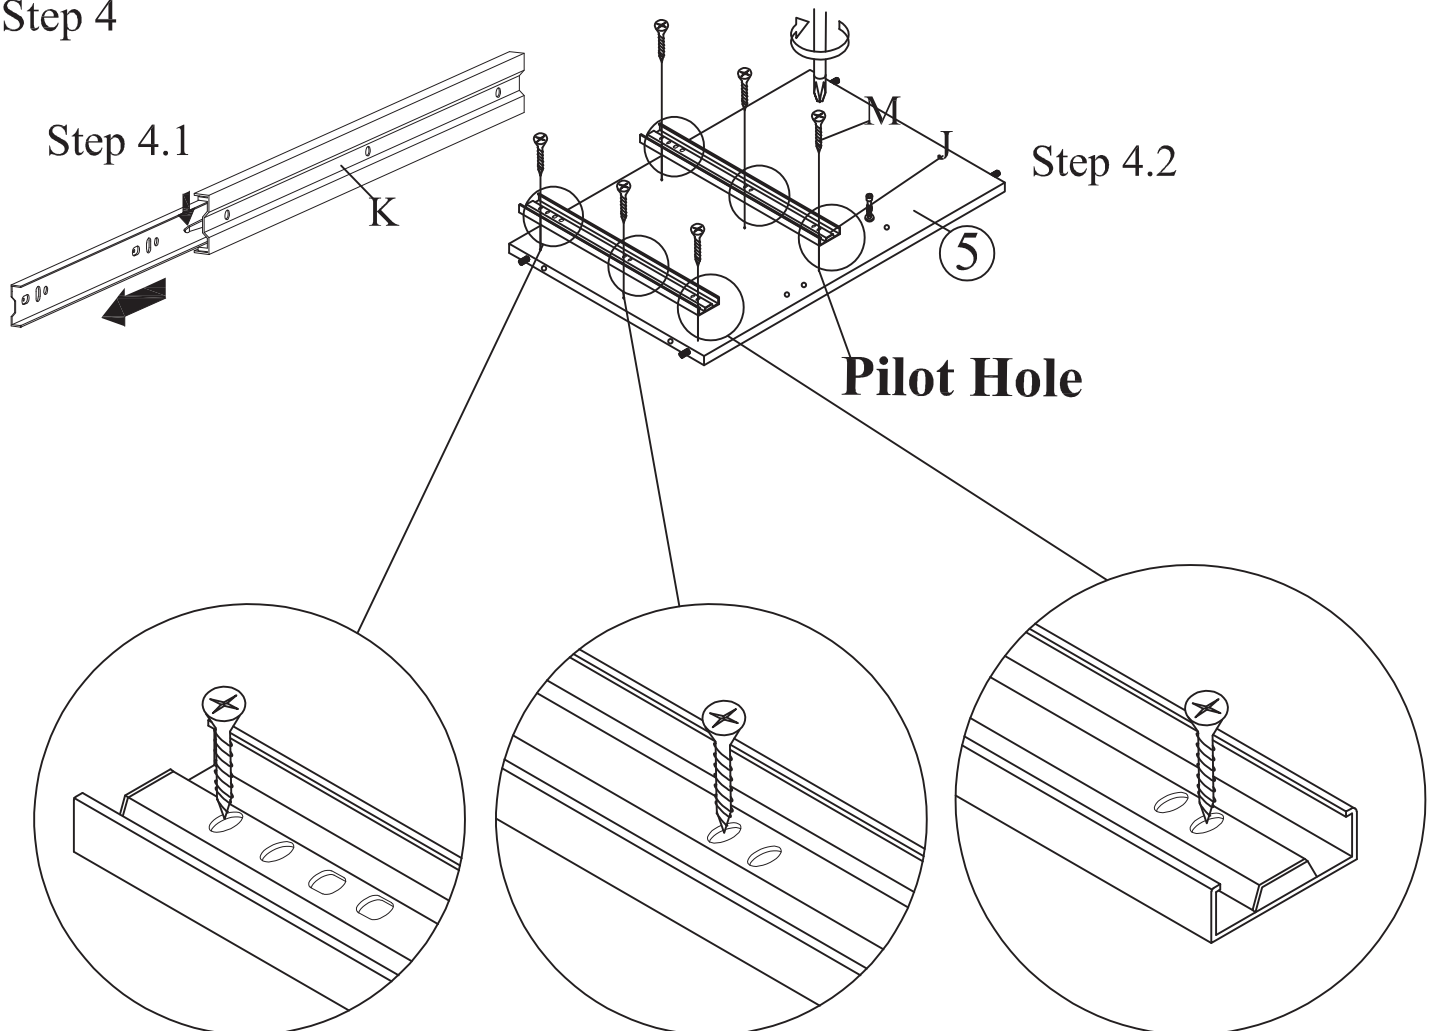

Step 5

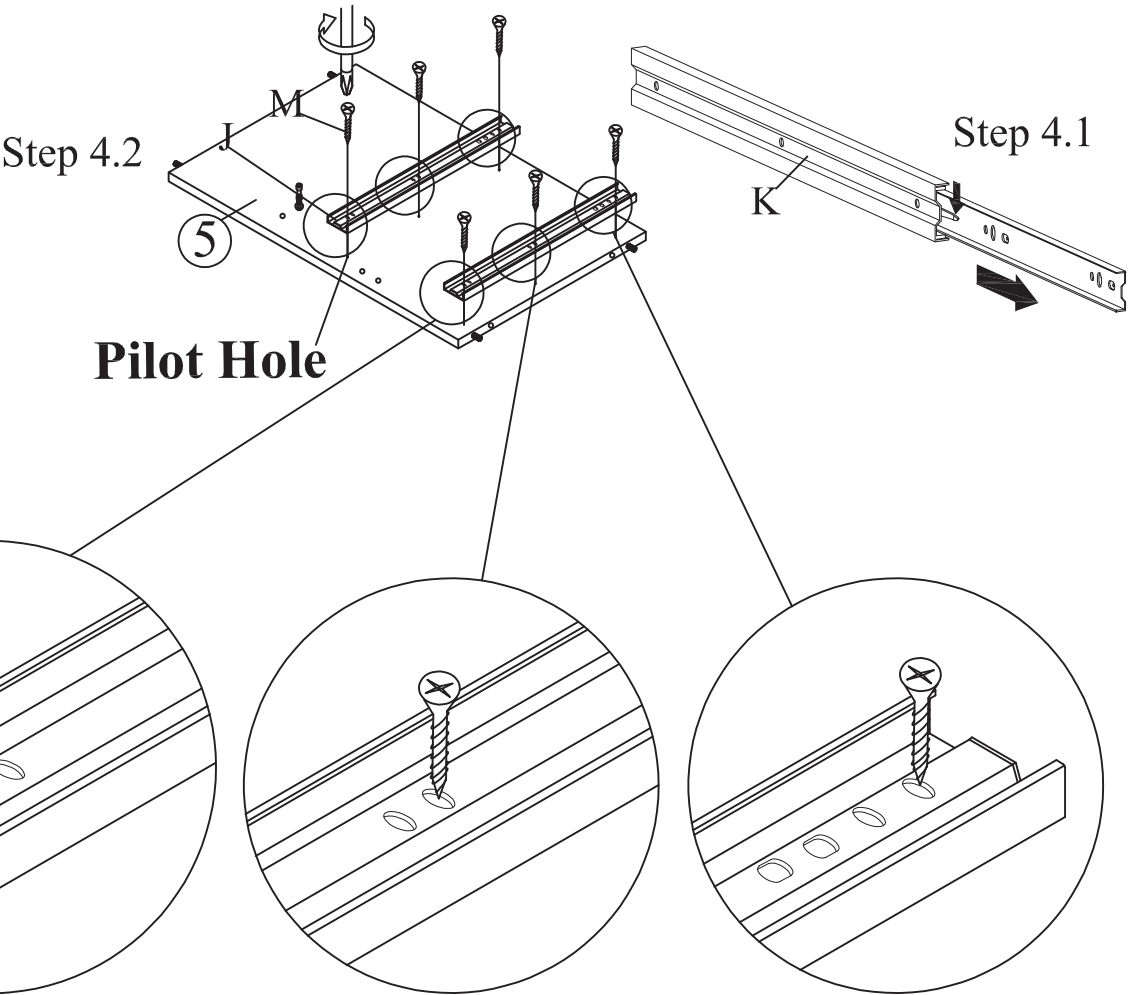


Step 6

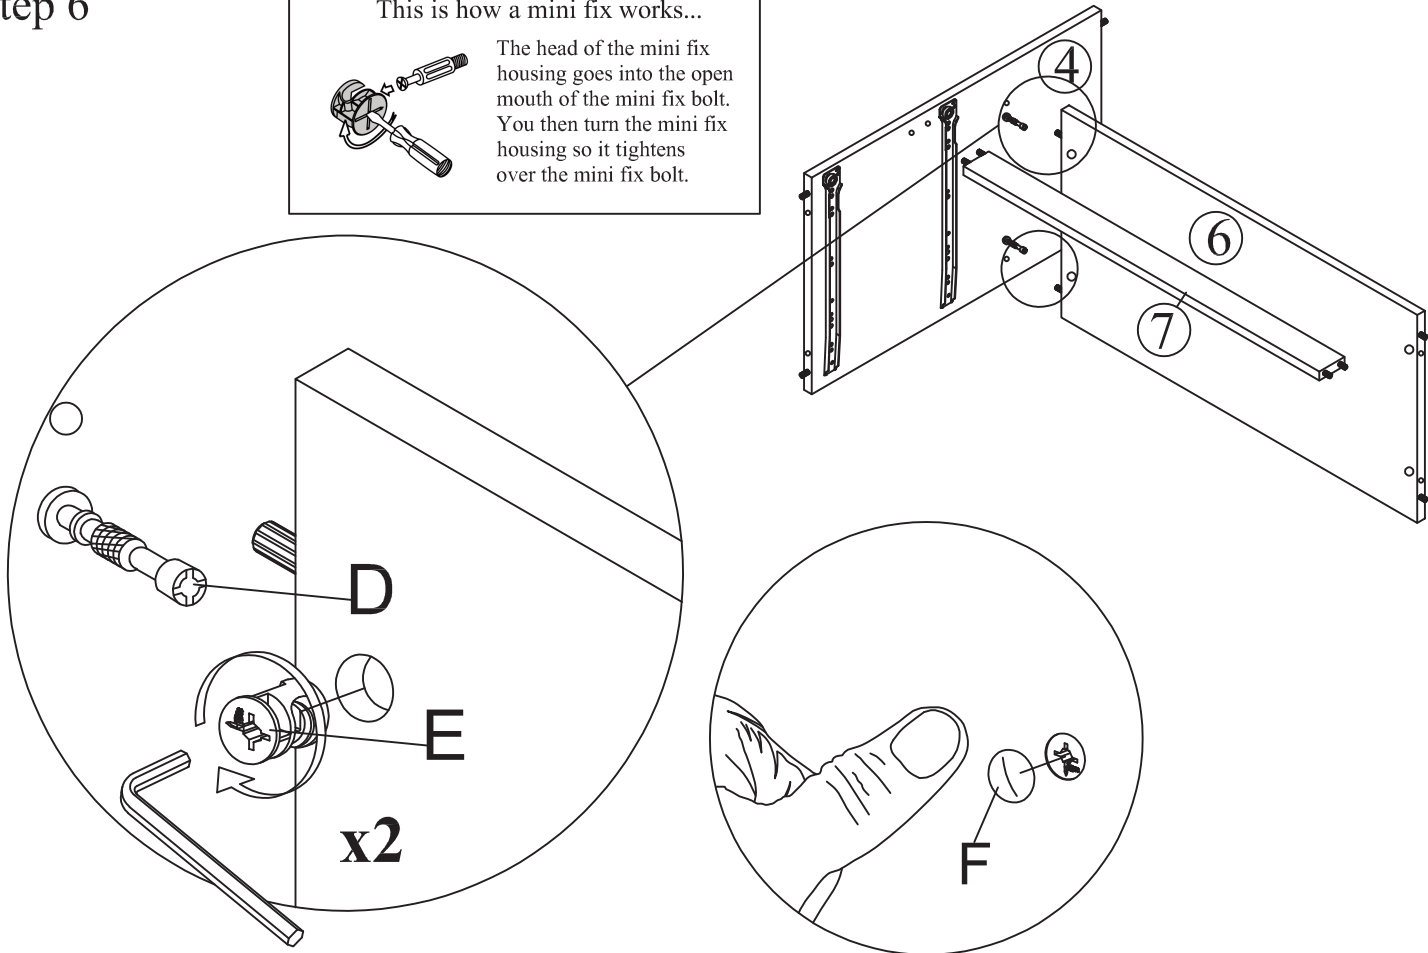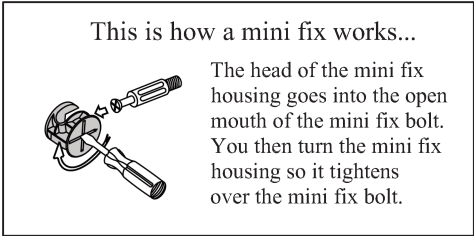


**Attach Minifix Cap as shown.*



Step 7

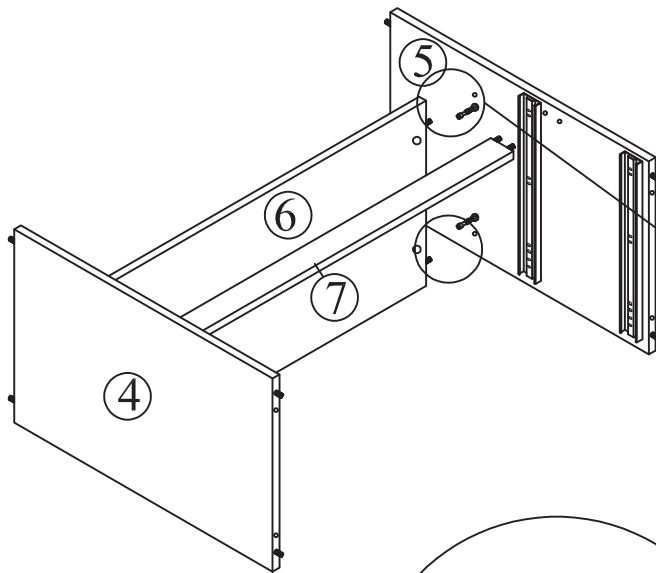

This is how a mini fix works...

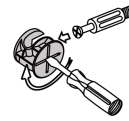


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

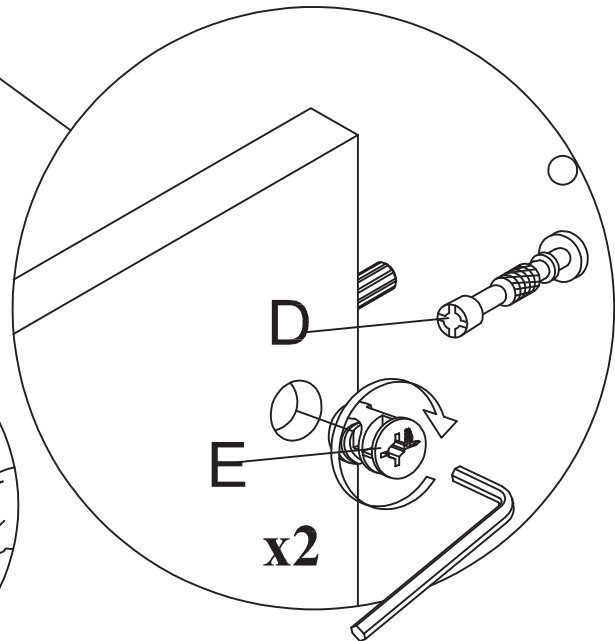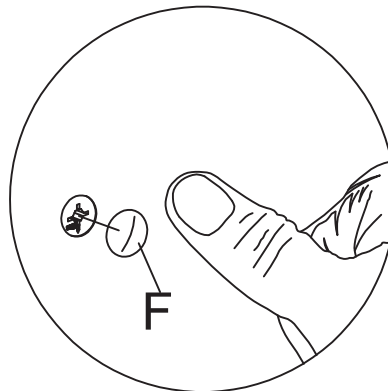




***Attach Minifix Cap as shown.**

Step 8

This is how a mini fix works...

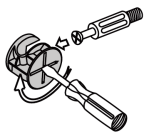


The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.

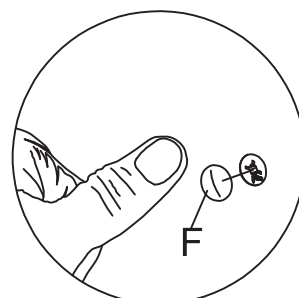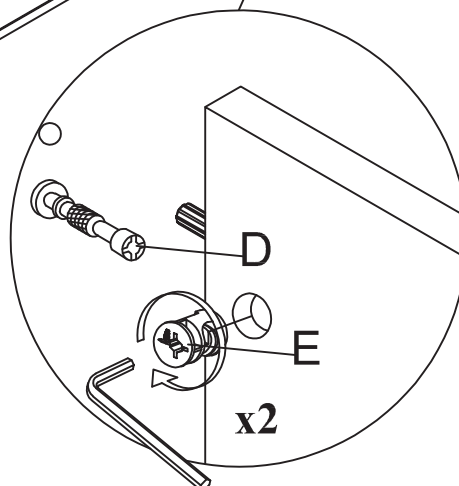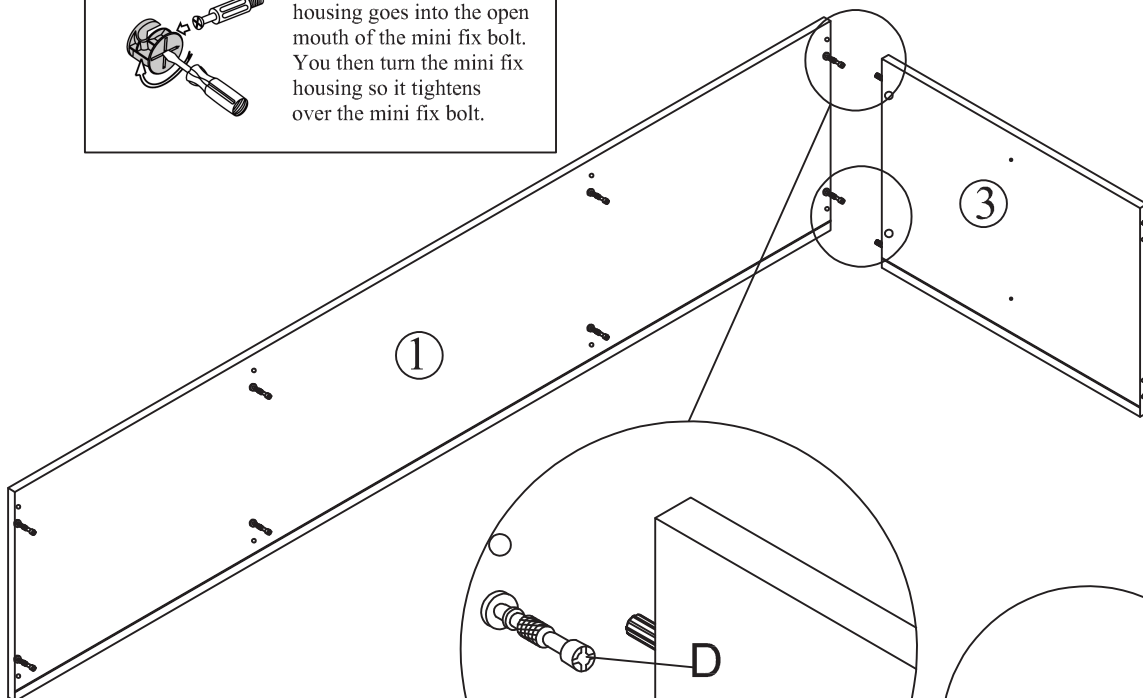


***Attach Minifix Cap as shown.**


Step 9

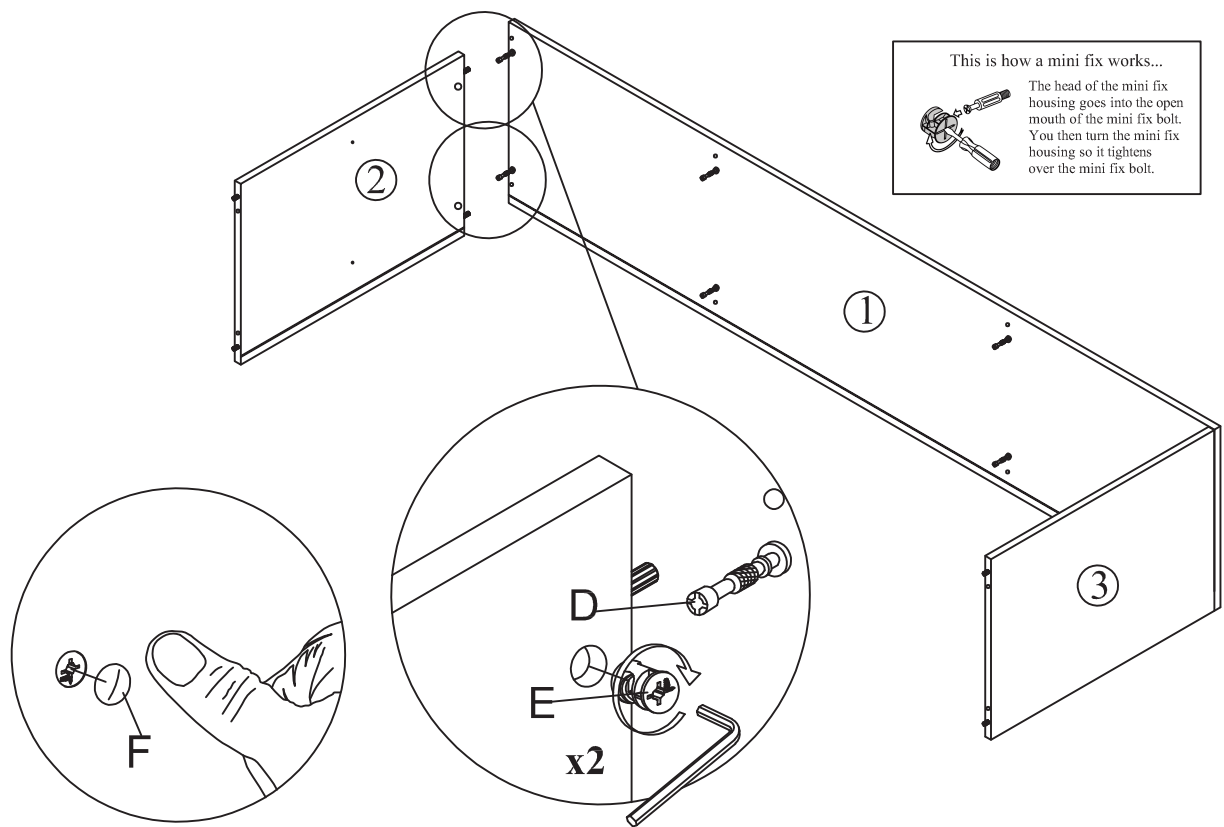


Step 10

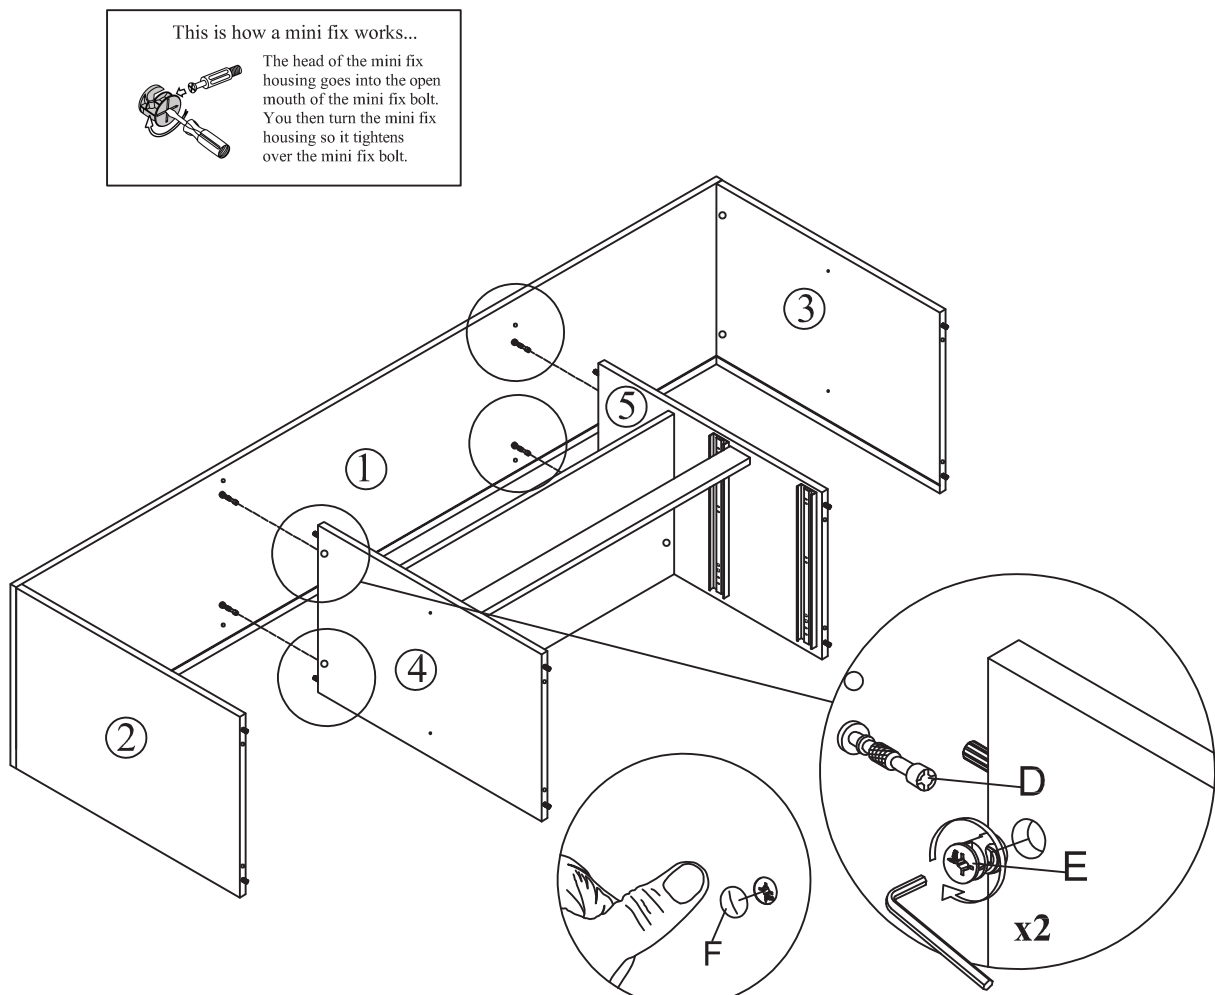


Step 11

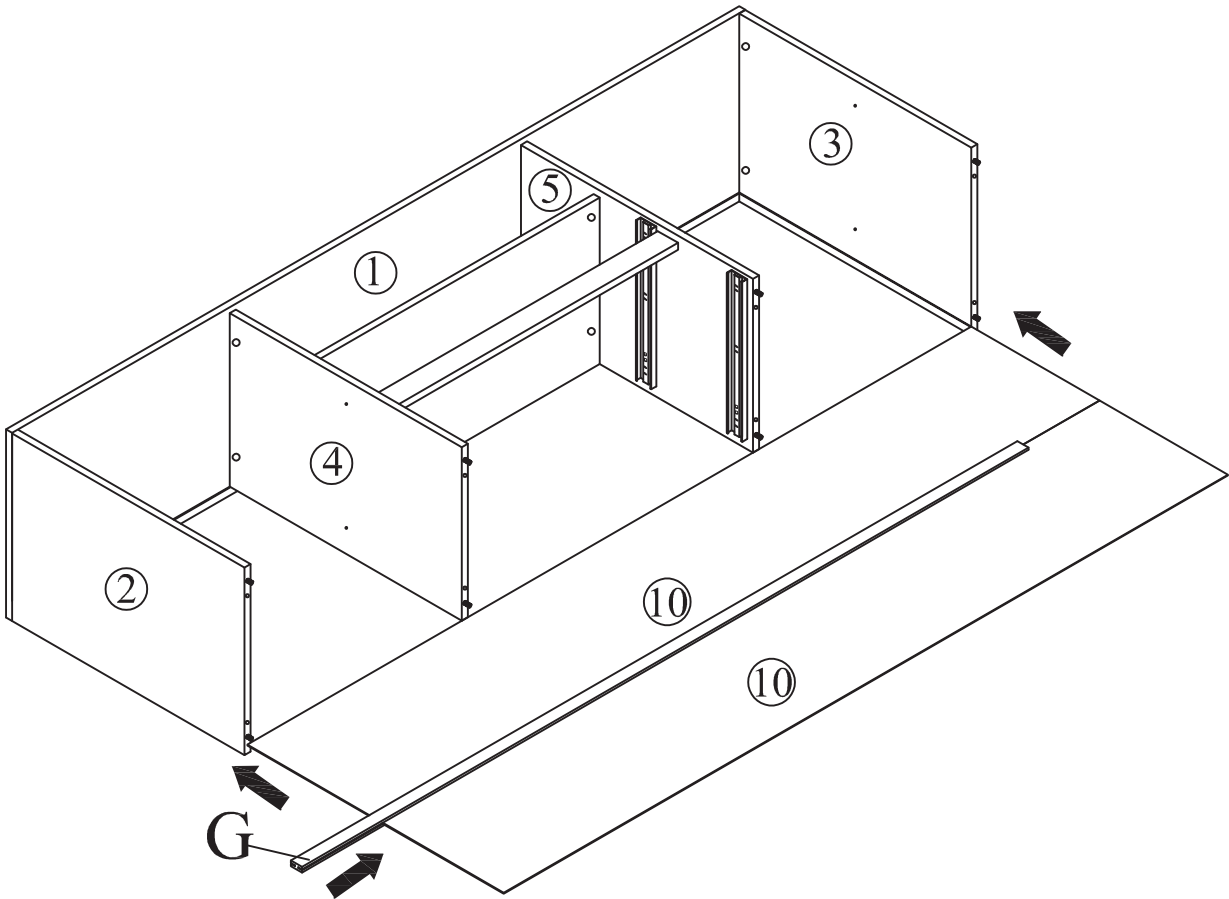


Step 12

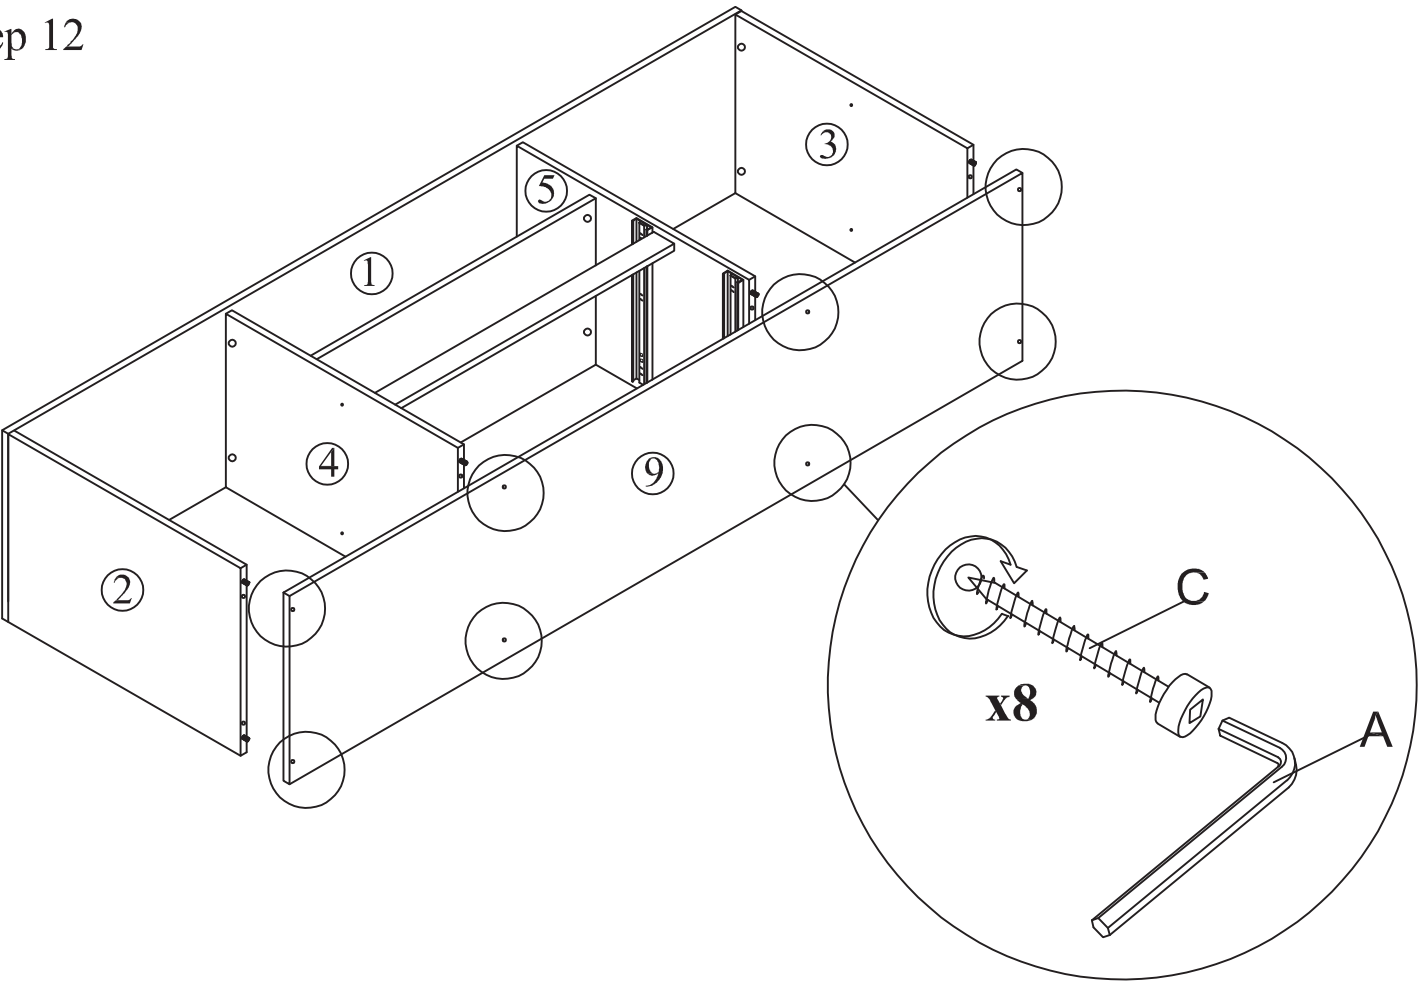


Step 13

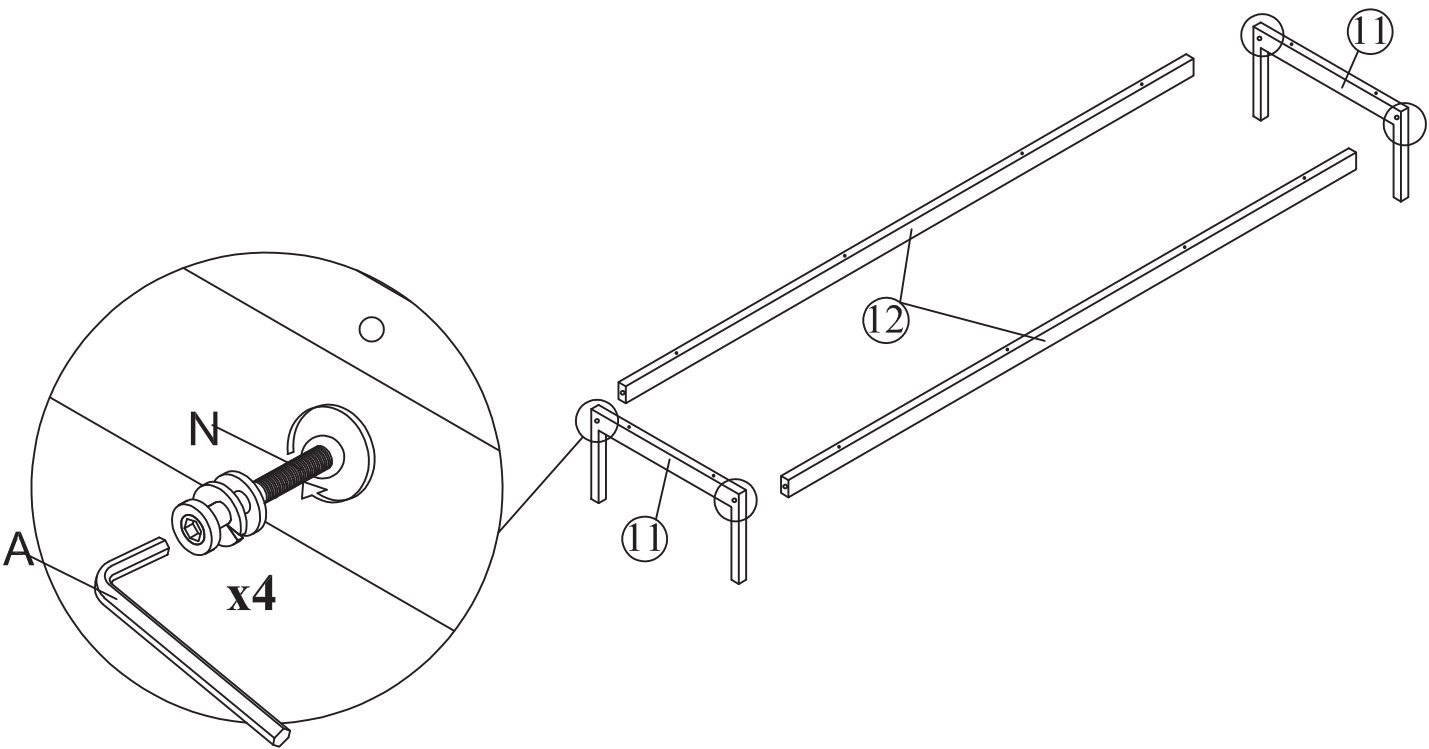


Step 14

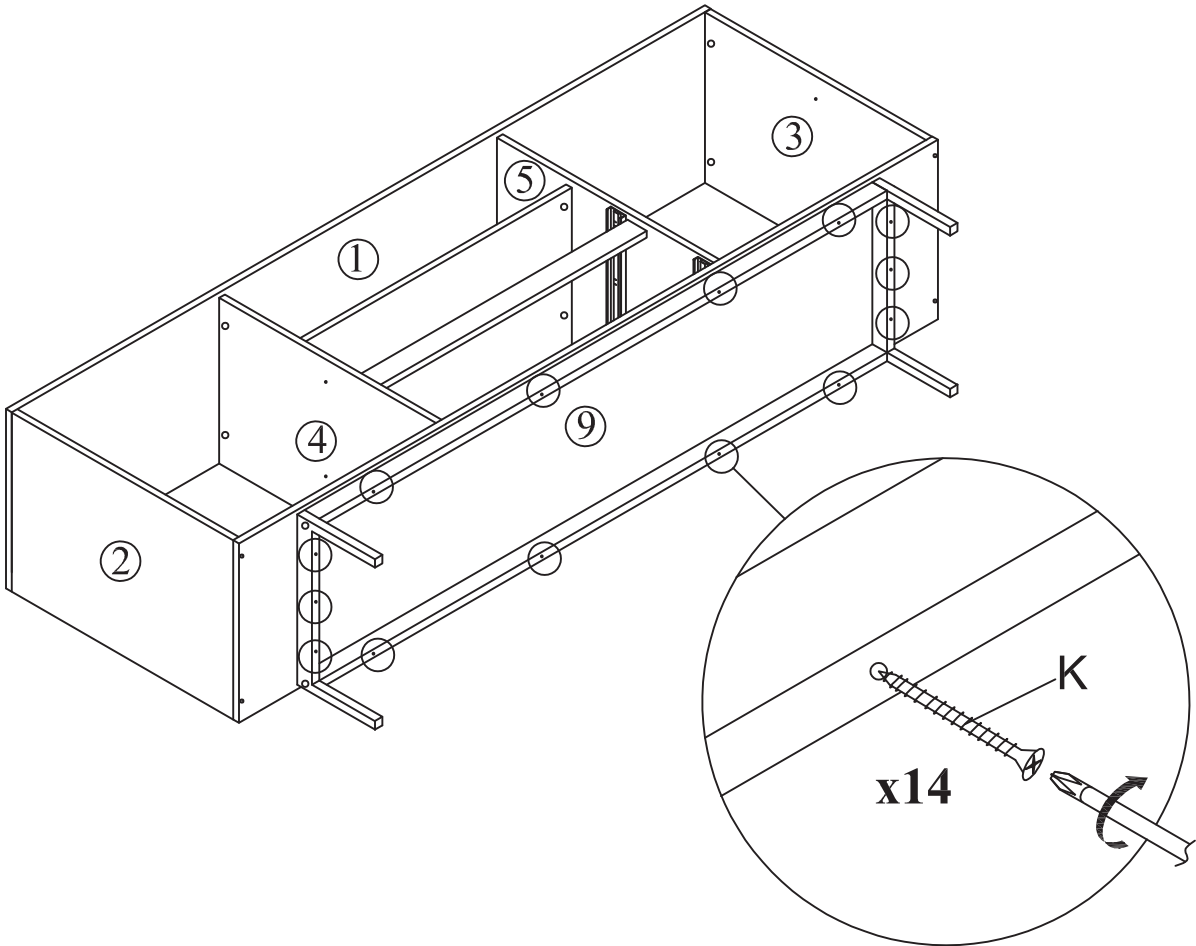


Step 15

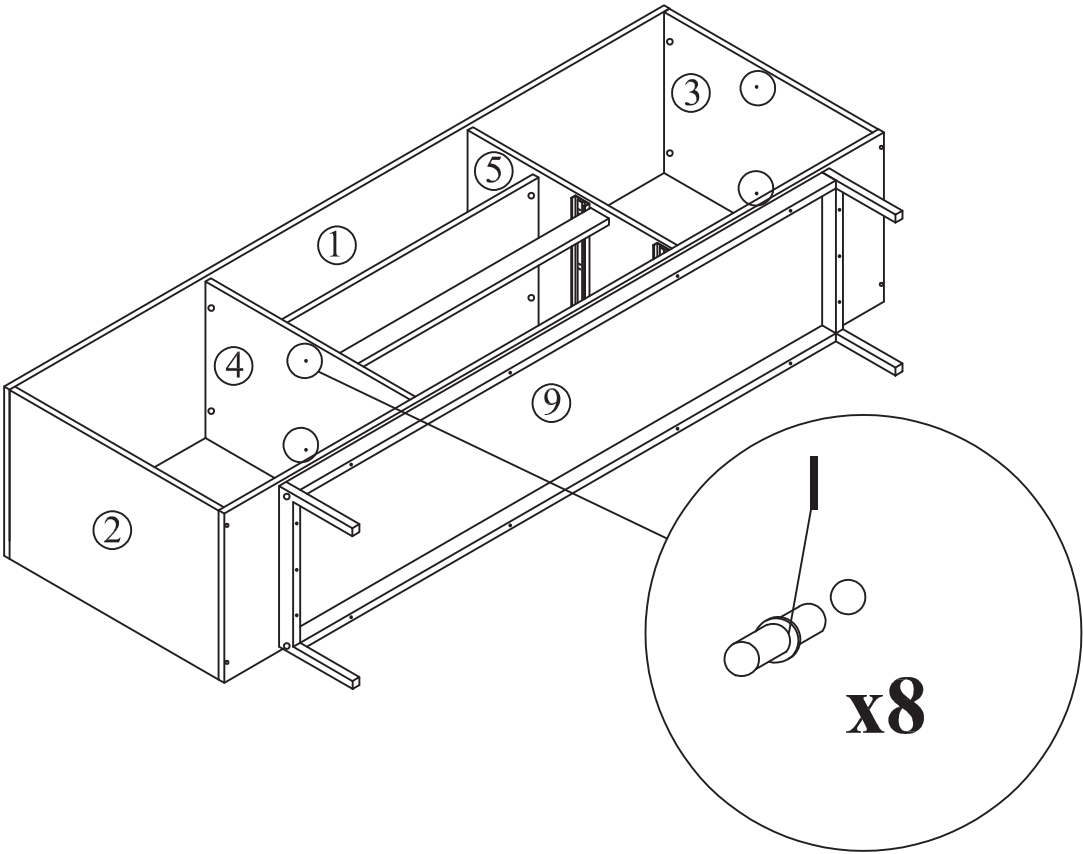


Step 16

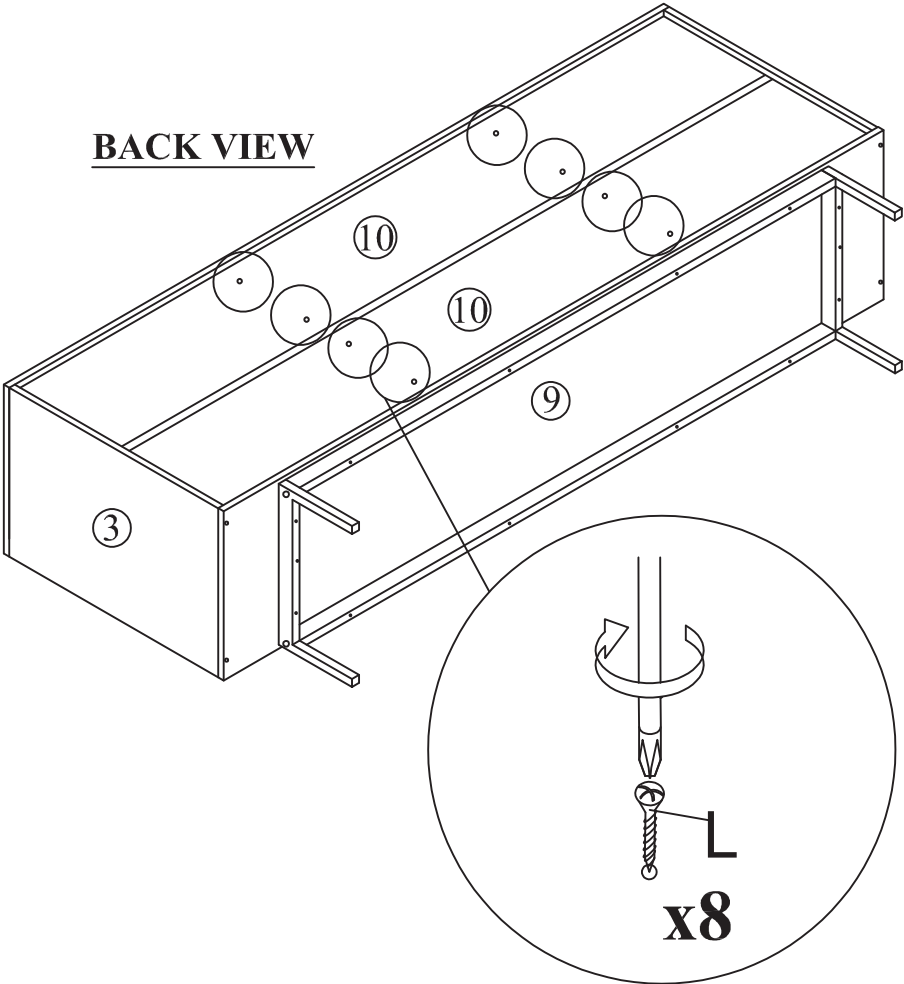


Step 17

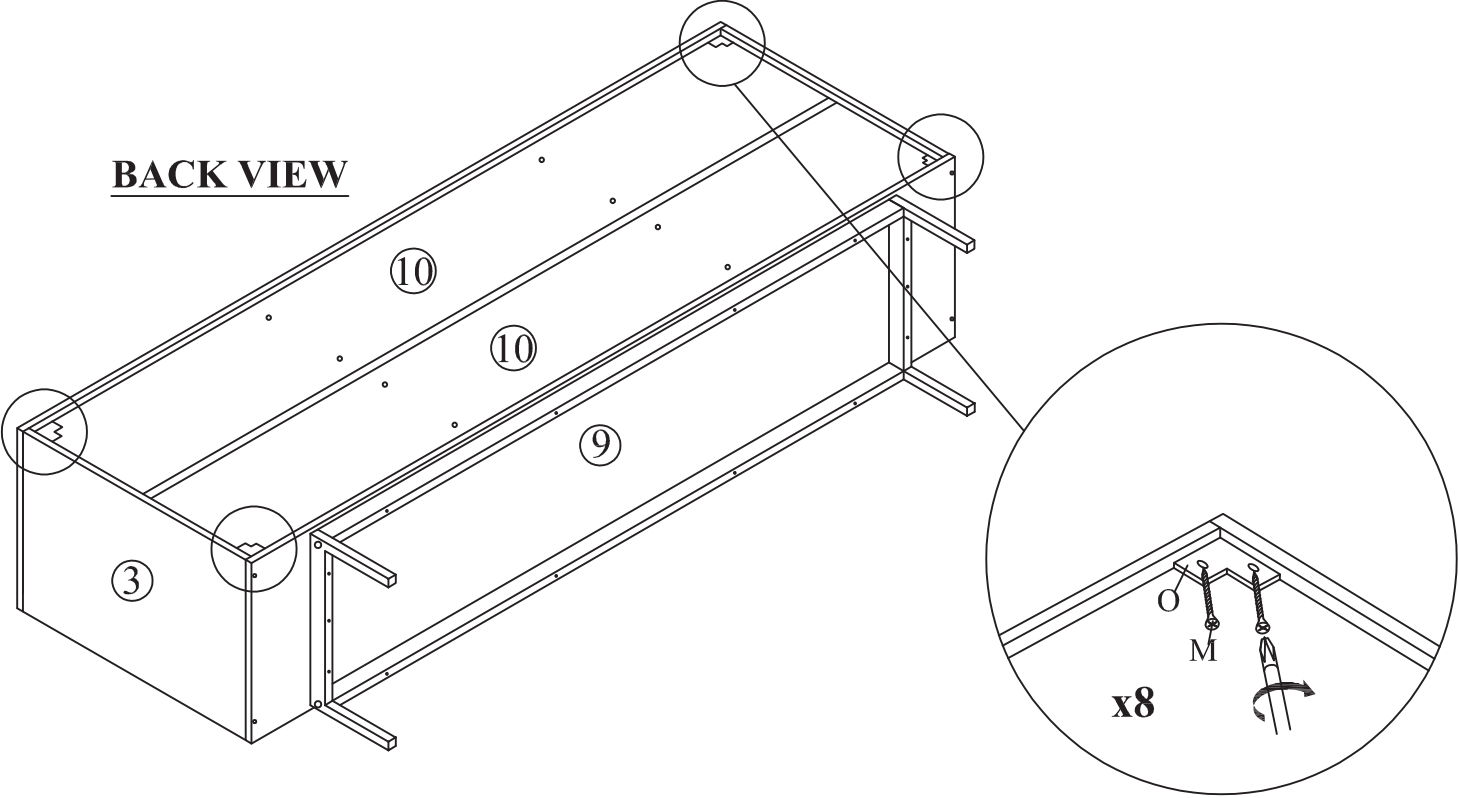


Step 18

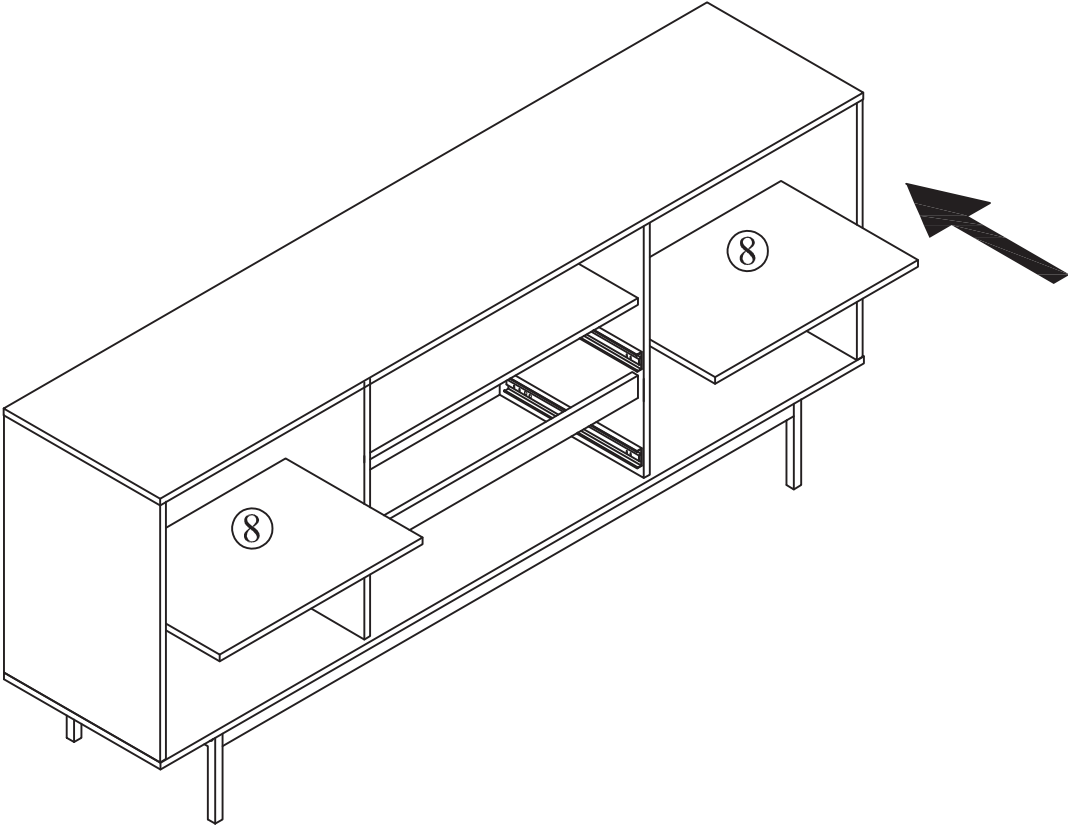

Step 19

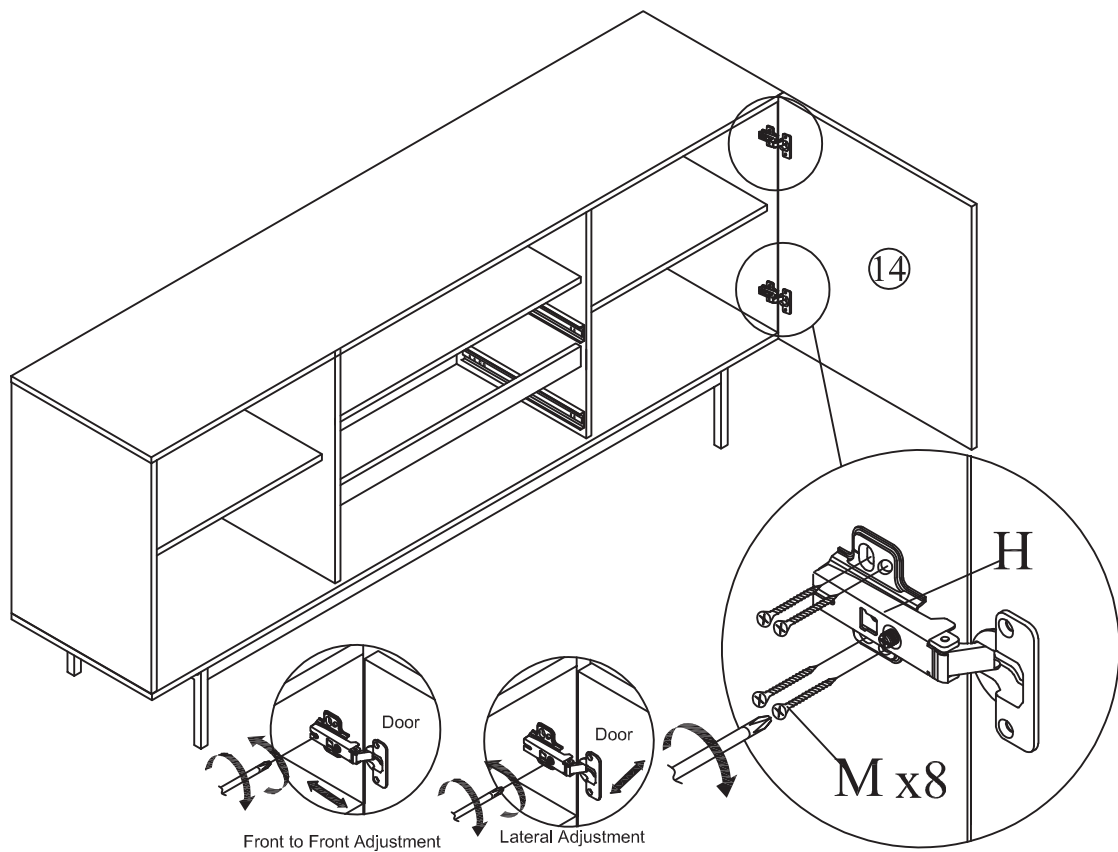


Step 20

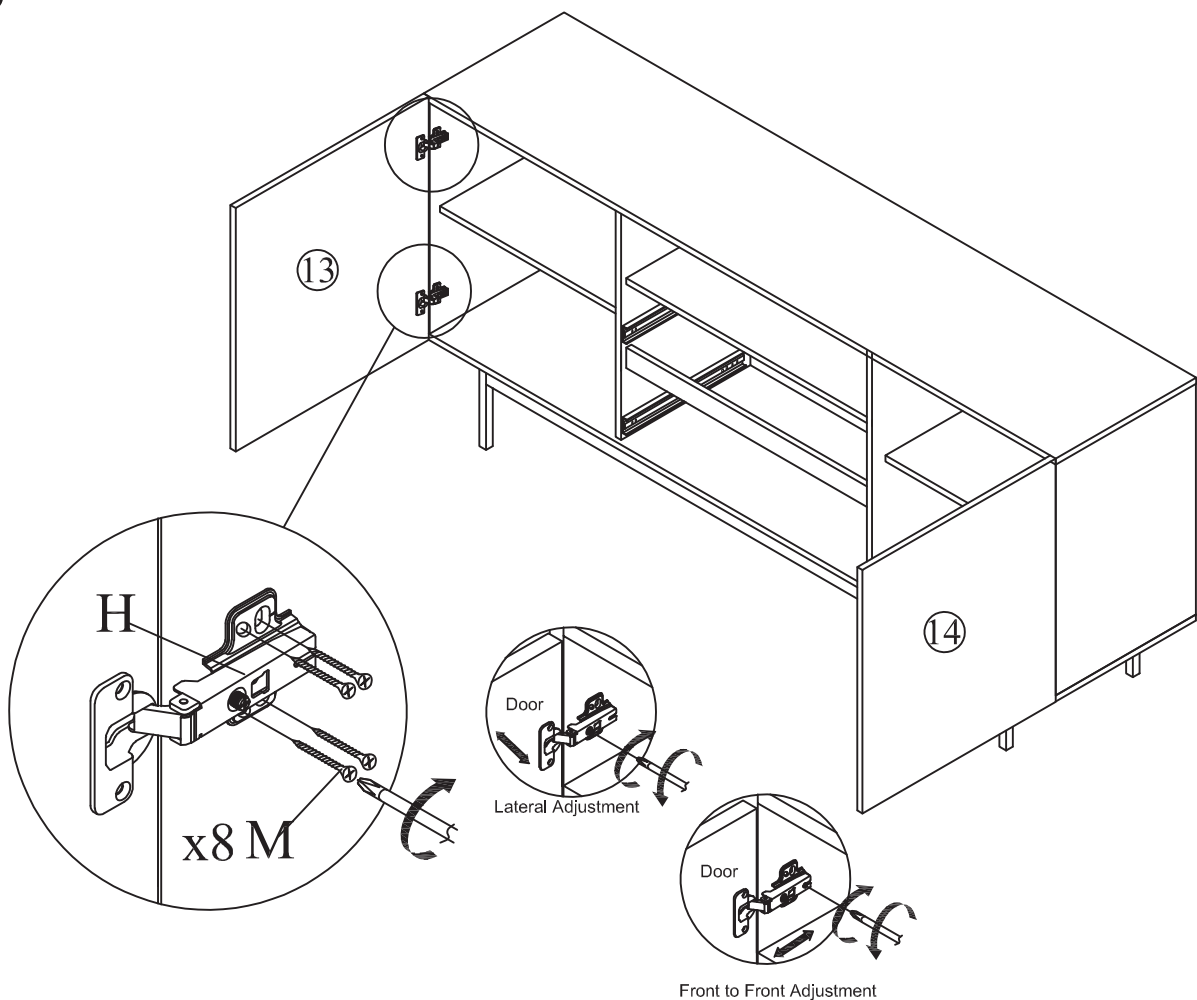


Step 21

Step 21.1

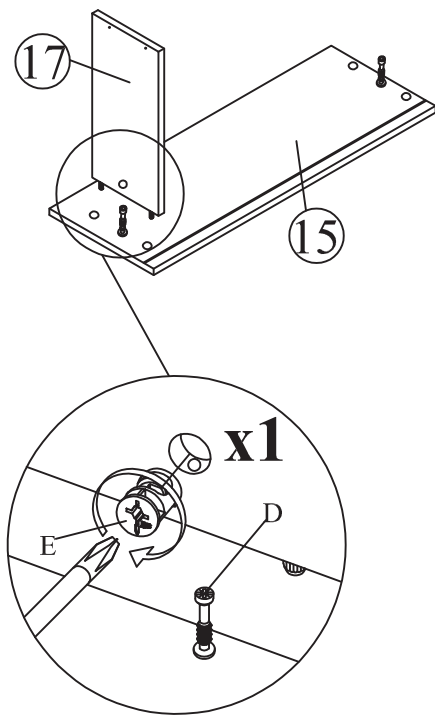


This is how a mini fix works...

The head of the mini fix housing goes into the open mouth of the mini fix bolt. You then turn the mini fix housing so it tightens over the mini fix bolt.



x2

Step 21.2

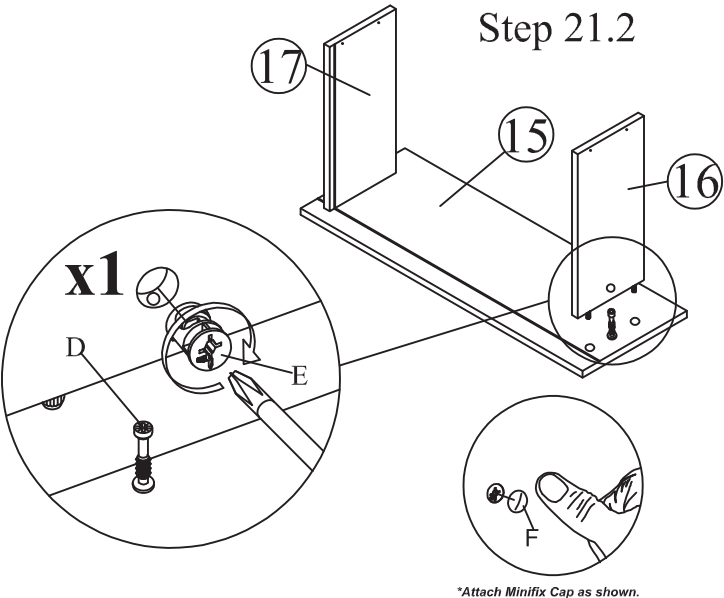


*Attach Minifix Cap as shown.


Step 22

x2

Step 22.1

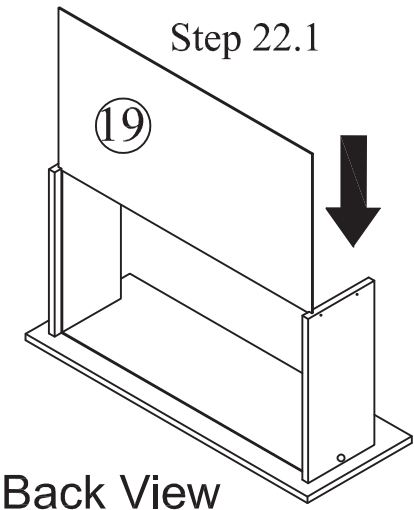


Step 22.2

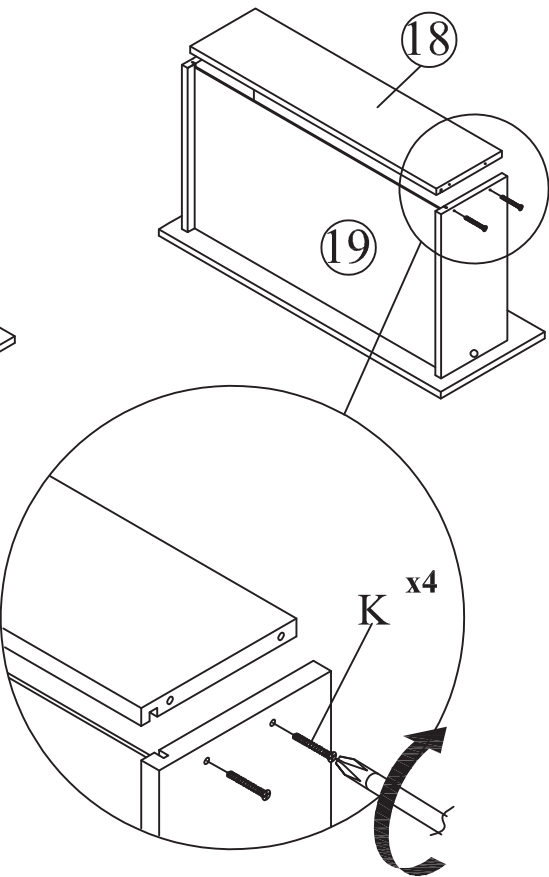




Step 23

x2

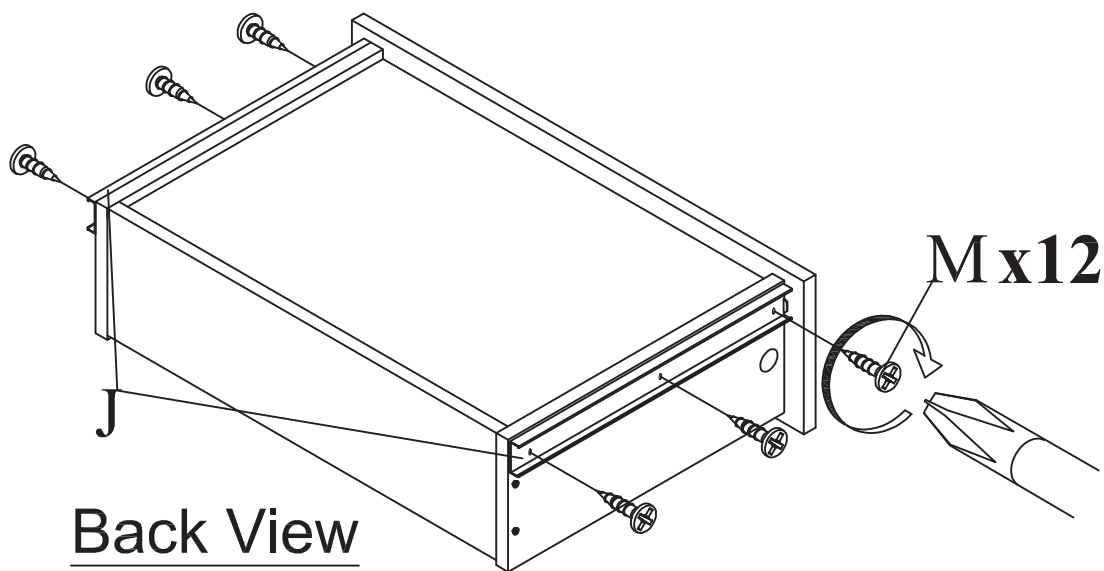

Step 24

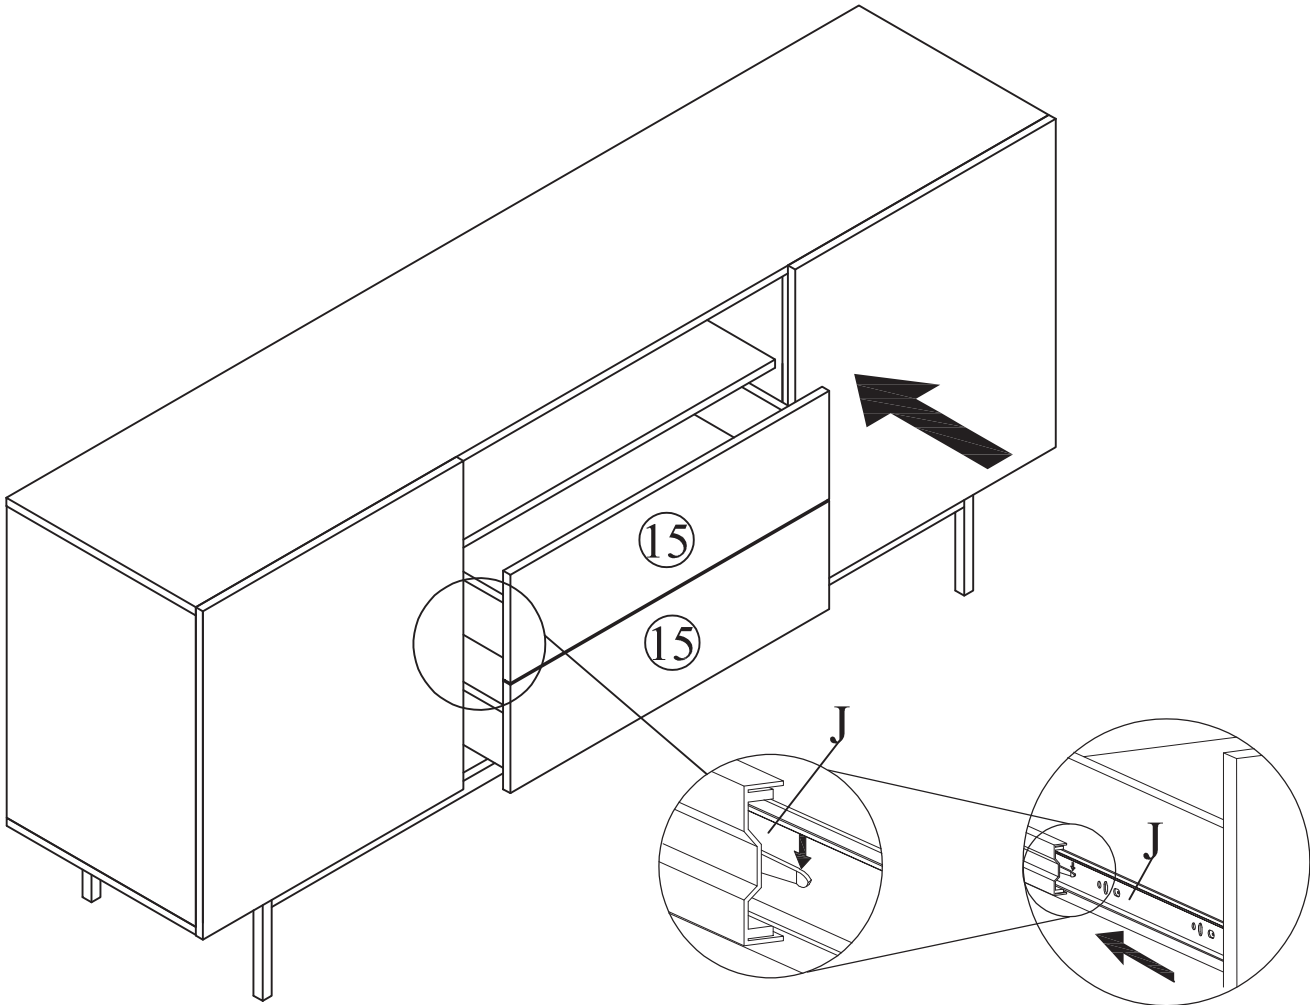

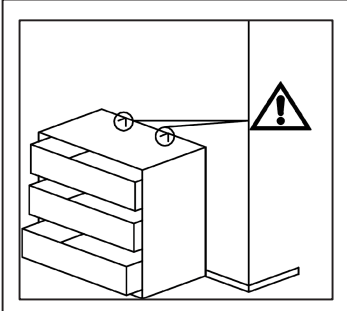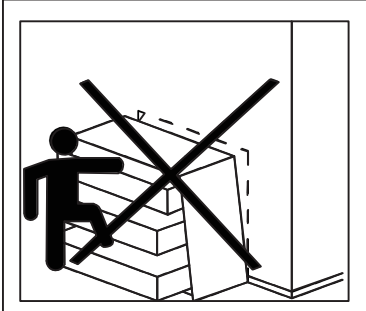Anti - Tipping	(A)  CSK Screw M3.5x16mm 1PC	(B)  CSK Screw M4x50mm 1PC	(C)  L BRACKET 2PCS	(D)  CABLE TIE 1PC		
---------------------------	--	--	---	--	--	---

BACK VIEW

